

# Manual



Expert PDU Energy 8340 Series  
Expert PDU Energy 8341 Series



© 2023 GUDE Systems GmbH  
Manual Ver. 1.9.0  
from Firmware Ver. 1.9



# Table of contents

<b>1. Device Description</b>	<b>5</b>
1.1 Security Advice .....	6
1.2 Content of Delivery .....	6
1.3 Description .....	6
1.4 Installation .....	7
1.5 Hotswap Drawer .....	8
1.6 Technical Specifications .....	9
1.6.1 Electrical Measurement .....	9
1.7 Sensor .....	10
<b>2. Operating</b>	<b>12</b>
2.1 Operating the device directly .....	13
2.2 Control Panel .....	13
2.3 Maintenance .....	14
2.3.1 Maintenance Page .....	16
2.3.2 Configuration Management .....	17
2.3.3 Bootloader Activation .....	18
<b>3. Configuration</b>	<b>21</b>
3.1 Ethernet .....	22
3.1.1 IP Address .....	22
3.1.2 IP ACL .....	24
3.1.3 HTTP .....	25
3.2 Protocols .....	26
3.2.1 Console .....	26
3.2.2 Syslog .....	27
3.2.3 SNMP .....	27
3.2.4 Radius .....	29
3.2.5 Modbus TCP .....	31
3.2.6 MQTT .....	32
3.3 Clock .....	33
3.3.1 NTP .....	33
3.3.2 Timer .....	34
3.3.3 Timer Configuration .....	34
3.4 Sensors .....	41
3.5 E-Mail .....	42
3.6 Front Panel .....	44
<b>4. Specifications</b>	<b>45</b>
4.1 Automated Access .....	46
4.2 Messages .....	46

# Table of contents

<b>4.3</b>	<b>IP ACL</b> .....	<b>48</b>
<b>4.4</b>	<b>IPv6</b> .....	<b>49</b>
<b>4.5</b>	<b>Radius</b> .....	<b>49</b>
<b>4.6</b>	<b>SNMP</b> .....	<b>50</b>
4.6.1	Device MIB 8340 .....	53
4.6.2	Device MIB 8341 .....	54
<b>4.7</b>	<b>SSL</b> .....	<b>56</b>
<b>4.8</b>	<b>Console</b> .....	<b>58</b>
4.8.1	SSH .....	62
4.8.2	Cmd 8340 / 8341 .....	63
<b>4.9</b>	<b>Modbus TCP</b> .....	<b>72</b>
4.9.1	Sensor Tables .....	78
<b>4.10</b>	<b>MQTT</b> .....	<b>79</b>
4.10.1	Example HiveMQ .....	81
<b>5.</b>	<b>Support</b> .....	<b>83</b>
5.1	Data Security .....	84
5.2	HTTP Performance .....	84
5.3	Contact .....	85
5.4	Declaration of Conformity .....	85
5.5	FAQ .....	86
<b>Index</b>		<b>88</b>

# Device Description

## 1 Device Description

### 1.1 Security Advice

---

- The device must be installed only by qualified personnel according to the following installation and operating instructions.
- The manufacturer does not accept responsibility in case of improper use of the device and particularly any use of equipment that may cause personal injury or material damage.
- The device contains no user-maintenable parts. All maintenance has to be performed by factory trained service personnel.
- This device contains potentially hazardous voltages and should not be opened or disassembled.
- The device can be connected only to 230V AC (50 Hz or 60 Hz) power supply sockets.
- The power cords, plugs and sockets have to be in good condition. Always connect the device to properly grounded power sockets.
- The device is intended for indoor use only. Do NOT install them in an area where excessive moisture or heat is present.
- Because of safety and approval issues it is not allowed to modify the device without our permission.
- The device is NOT a toy. It has to be used or stored out of range of children.
- Care about packaging material. Plastics has to be stored out of range of children. Please recycle the packaging materials.
- In case of further questions, about installation, operation or usage of the device, which are not clear after reading the manual, please do not hesitate to ask our support team.
- Please, never leave connected equipment unattended, that can cause damage.
- Connect only electrical devices that do not have limited on-time. I.e. in case of failure, all connected appliances have to cope with a continuous on-time without causing damage.

### 1.2 Content of Delivery

---

The package includes:

- **Expert PDU Energy 8340 / 8341**
- 1 x Power Supply cable (IEC C13, max. 10 A)
- Quick Start Guide

### 1.3 Description

---

The **PDU Energy 8340 / 8341** can meter energy values on 2 (resp. 4) different phases (from IEC C20 to IEC C19, max. 16 A). The device has the following features:

- Energy Metering of 2 phases (**model 8340-x**) or 4 phases (**model 8341-x**) and measurement of voltage, current, active power, reactive power, apparent power, frequency, phase angle, power factor

# Device Description

- Energy meters for all phases, continuously and resettable
- Measurement of residual current for all phases (**models 8340-2, 8341-2**)
- Hot Swap Drawer - The device electronics, including power supply, can be replaced on a drawer without the need to turn off the PDU consumers
- Connecting of two optional external sensors to determine the temperature and humidity, or a input switch
- One three-digit 7-segment LED displays (for display of current, external sensor values, IP-address and device status)
- Console commands via SSH and Telnet
- SSH support with public key and passwords
- Programmable timetables for console commands
- Dual TCP/IP stack with IPv4 and IPv6 support (IPv6-ready)
- Control and monitoring of the device via Ethernet with an integrated web server with SSL encryption (TLS 1.1, 1.2, 1.3)
- Configuration with CGI parameters and JSON messages via HTTP (REST API)
- SNMP (v1, v2c and v3, traps)
- MQTT 3.1.1 Support
- Modbus TCP support
- Radius support
- Generation of messages (e-mail, syslog and SNMP traps) depending on sensor measurement limits
- Firmware update during operation via Ethernet possible
- Encrypted e-mails (SSL, STARTTLS)
- Access protection through IP access control
- Low own consumption
- Developed and produced in Germany


## 1.4 Installation

---

### Front of the device



1. Current power consumption of Phase (7-segment LED)
2. 8 plain text displays L1 to L4 as voltage indicator (green symbol) and which phase is shown in the display (red symbol)
3. Status LED
4. Buttons "Select" and "OK"
5. Ethernet connector (RJ45)
6. External sensor connectors (RJ45)

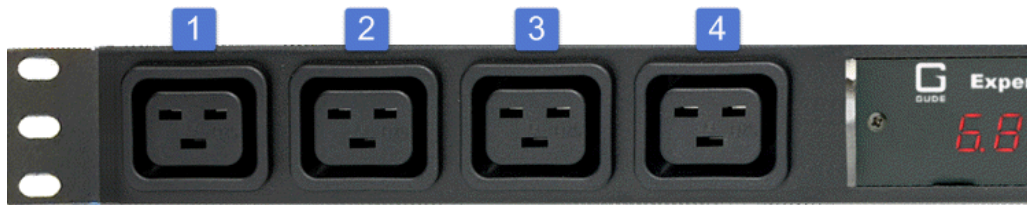

1. - 4. Load outputs for phases L1 to L4 (IEC C19, max. 16 A)

## Rear of the device



1. - 4. Load inputs for phases L1 to L4 (IEC C20, max. 16 A)  
5. Mains supply (IEC C14, max. 10 A)

## Start-up the device

- Connect the power cord (IEC C14, max. 10 A) to the mains supply.
- Plug the network cable into the Ethernet socket (RJ45).
- Insert optional external sensors into the sensor connectors.
- Connect the mains supply with the load inputs (IEC C20, max. 16 A), and the consumers with the load outputs (IEC C19, max. 16 A). The cable connectors are secured as regards their type against unintentional loosening. They must be inserted up to the stop, otherwise there is no secure connection. The plug must not wobble in the socket, or there is no tight connection.

## 1.5 Hotswap Drawer

---

This PDU is "hot-swap" capable. The device has a removable drawer, on which all of the active electronics, including the power supply, is located. In case of a fault, you can order a replacement electronics from the manufacturer. The devices connected to the ports are not disturbed in the exchange. Specific instructions for replacement of the electronics drawer will be delivered with the exchange electronics. Do not open the drawer without a compelling reason, this can lead to loss of warranty.



## 1.6 Technical Specifications

Interfaces	1 x Ethernet port (RJ45) 1 x Mains supply (IEC C14, max. 10 A) 4 x Load inputs (IEC C20, max. 16 A) 4 x Load outputs (IEC C19, max. 16 A) 2 x RJ45 for external sensor
Network connectivity	10/100 MBit/s 10baseT Ethernet
Power Supply	internal power supply (90-265V AC / -15% / +10%)
Environment <ul style="list-style-type: none"> <li>• Operating temperature</li> <li>• Storage temperature</li> <li>• Humidity</li> </ul>	0°C - 50 °C -20°C - 70 °C 0% - 95% (non-condensing)
Case	powder coated, galvanized steel sheet
Measurements	19" (inches), 1 Rack Unit, (Depth 195 mm)
Weight	approx. 3.3 kg

### 1.6.1 Electrical Measurement

typical fault tolerances for Ta=25°C, I=1Arms...16Arms, Un=90Vrms...265Vrms

Electrical Measurement Specification				
Category	Range	Unit	Resolution	Inaccuracy (typical)
Voltage	90-265	V	0.01	< 1%
Current	0 - 16	A	0.001	< 1.5%
Frequency	45-65	Hz	0.01	< 0.03%
Phase	-180 - +180	°	0.1	< 1%
Active power	0 - 4000	W	1	< 1.5%
Reactive power	-4000 - 4000	Var	1	< 1.5%
Apparent power	0 - 4000	VA	1	< 1.5%
Power factor	0 - 1	-	0.01	< 3%
Energy Counter				
Active Energy (total)	9.999.999,999	kWh	0.001	< 1.5%
Active Energy (resettable)	9.999.999,999	kWh	0.001	< 1.5%

## 1.7 Sensor

Two external sensors can be connected to the **Expert PDU Energy 8340 / 8341**. The following sensors are currently available




7101



7104 - 7106

Product Name	7101	7104-1	7105-1	7106-1
Calibrated Sensor	-	7104-2	7105-2	7106-2
Cable length	≈ 2m	≈ 2m	≈ 2m	≈ 2m
Connector	RJ45	RJ45	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)
air humidity range (non-condensing)	-	-	0-100%, ±3% (typical), 10-80% ±2% (typical)	0-100%, ±3% (typical), 10-80% ±2% (typical)
air pressure range (full)	-	-	-	± 1 hPa (typical) at 300 ... 1100 hPa, 0 ... +40 °C
air pressure range (ext)	-	-	-	± 1.7 hPa (typical) at 300 ... 1100 hPa, -20 ... 0 °C
Protection	IP68	-	-	-

# Device Description

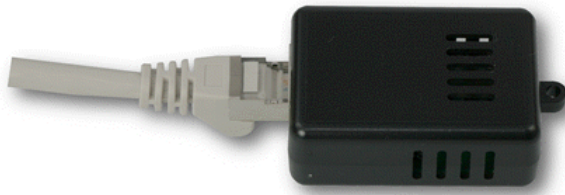

7201, 7202

Product Name	7201	7202
Cable length	-	-
Connector	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)
air humidity range (non-condensing)	-	0-100%, ±3% (typical)

The sensors are automatically detected after connect. This is indicated by the green LED on the sensor port that is lit permanently. The sensor values are displayed at the "Control Panel" web page:

Id	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	<a href="#">7106</a>	22.5	34.2	5.9	16.6	1013.8

A click on the link in the "Name" column opens the display of the Min and Max values. The values in a column can be reset using the "Reset" button. The "Reset" button in the name column deletes all stored Min and Max values.

Id	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	<a href="#">7106</a>	22.5	34.4	6.1	16.5	1013.8
	30m min	0.0	34.1	5.9	16.4	125.0
	30m max	22.6	34.7	6.2	300.0	1013.8
	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>

**Operating**

## 2 Operating

### 2.1 Operating the device directly

---

#### Power Indicator

If the current is shown on the 7-segment display (see Configuration - sensor<sup>[41]</sup>), then the measured current values of all phases are displayed in sequential order. When no voltage is measured (smaller 70V) the display will show three dashes, and the green plain text displays L1 to L4 are off. The red plain text displays L1 to L4 symbolize which phase is currently viewable in the display.

#### Select Phase

By repeatedly pressing the "Select" button, the phase that appears on the display, can be selected manually. After approx 60 seconds the running through all phases resumes.

#### Display Information

If no phase is selected, repeatedly pressing the "ok" button will show the IP-address and the values of the external sensors on the display.

#### Status-LED

The Status LED shows the different states of the device:

- red: The device is not connected to the Ethernet.
- orange: The device is connected to the Ethernet and waits for data from the DHCP server.
- green: The device is connected to the Ethernet and the TCP/IP settings are allocated.
- periodic blinking: The device is in Bootloader mode.


### 2.2 Control Panel

---

Access the web interface: <http://IP-address> and log-in.

Id	Name	Voltage	Current	Freq	Phase	Power				Residual Current	total Energy	resettable Energy		Reset
		AC rms	AC rms	Hz	°	active	reactive	apparent	PF	AC rms	active	active	time	
		V	A			W	VAR	VA		mA	kWh	kWh	h:m:s	
L1	Meter1	224.9	0.017	50.01	31.9	2	0	2	0.62	0.2	0.508	0.062	1d 00:22:01	Reset
L2	Meter2	0.1	0.002	50.02	-97.5	-1	0	0	0.00	0.2	0.000	0.000	1d 00:12:01	Reset
L3	Meter3	0.0	0.002	49.99	-11.4	0	0	0	0.00	0.2	0.000	0.000	1d 00:12:01	Reset
L4	Meter4	0.0	0.002	105.92	69.0	0	0	0	0.00	0.2	0.000	0.000	1d 00:12:01	Reset

The web page provides an overview of the energy measurement values of all phases, as well as the external sensors, provided that they are connected.

 The column "Residual Current" is only visible on models that support this feature.

## 2.3 Maintenance

---

The actual device generation with IPv6 and SSL allows all maintenance functions in the web interface to be carried out on the Maintenance Page<sup>[16]</sup>.


### Maintenance in the web interface


The following functions are available from the maintenance web page:


- Firmware Update
- Change the SSL certificate
- Load and save the configuration
- Restart the device
- Factory Reset
- Jump into the Bootloader
- Delete the DNS cache

### Upload Firmware, Certificate or Configuration

On the Maintenance Page<sup>[16]</sup>, select the required file with "Browse .." in the sections "Firmware Update", "SSL Certificate Upload" or "Config Import File Upload" and press "Upload". The file is now transferred to the update area of the device and the contents are checked. Only now, pressing the "Apply" button will permanently update the data, or abort with "Cancel".

 Only one upload function can be initiated with a reboot, eg. you cannot transmit firmware and configuration at the same time.


 If after a firmware update, the web page is not displayed correctly anymore, this may be related to the interaction of Javascript with an outdated browser cache. If a Ctrl-F5 does not help, it is recommended that you manually delete the cache in the browser options. Alternatively, you can test start the browser in "private mode".

 During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page<sup>[16]</sup>).


### Actions in Bootloader mode

If the web interface of the device is no longer accessible, the device can be put into Bootloader mode (see chapter Bootloader activation<sup>[18]</sup>). The following functions can be executed using the GBL\_Conf.exe application:

- Set IPv4 address, net-mask and gateway
- Turn HTTP password on and off
- Turn IP-ACL on and off
- Factory Reset
- Allow jump from firmware to bootloader
- Restart the device

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

The GBL\_Conf.exe program is available free of charge on our website [www.gude.info](http://www.gude.info) and can also be found on the enclosed CD-ROM.

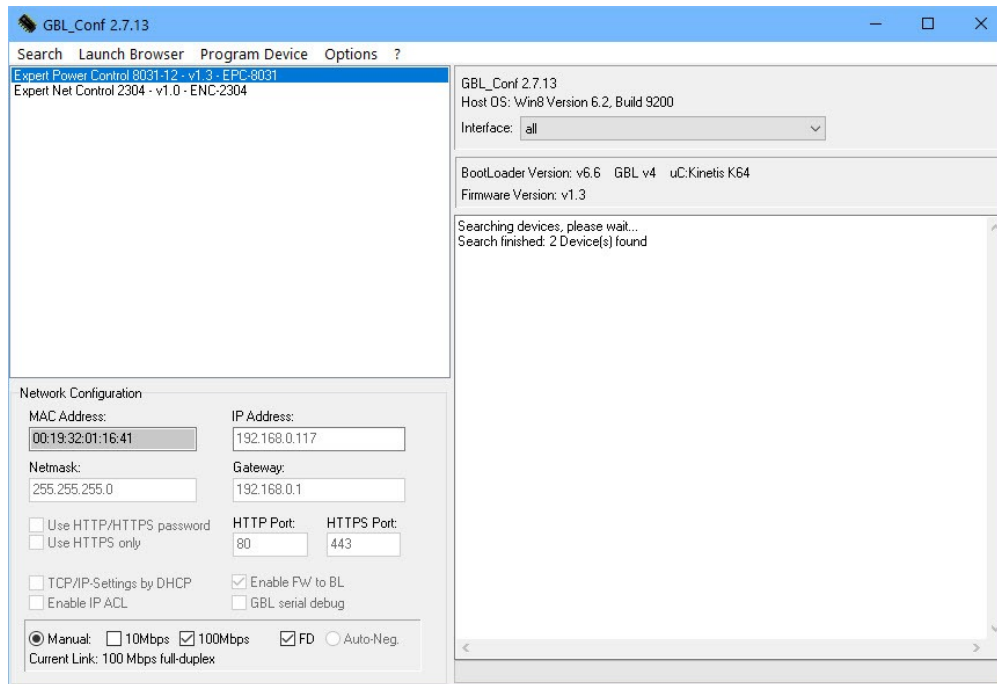


Interface GBL\_Conf

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

- Activate the Bootloader Mode (see Chapter Bootloader Mode) and choose in menu "Search" the item "Bootloader-Mode Devices only"
- Enter the desired settings in the edit window and save them with "Save Config".
- Deactivate the boot loader mode for the changes to take effect. Select again "All Devices" in the "Search" menu of GBL\_Conf.exe.

The new network configuration is now displayed.

 Changing the configuration with gbl\_conf.exe is explicitly only allowed in bootloader mode!

## Factory Reset

The device can be reset to the factory default via the web interface from the Maintenance Page<sup>[16]</sup> or from the Bootloader mode (see chapter Bootloader activation<sup>[18]</sup>). All TCP/IP settings are reset in this operation.

 If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

## 2.3.1 Maintenance Page

This section provides access to important functions such as Firmware Update or Restart Device. It is advisable to set an HTTP password for this reason.

**Firmware Update**

**SSL Certificate Upload**

**Config Import File Upload**

[Config File Export](#)

**Restart / Fab-Settings**

**Service Data**


- Config/Status View: [status.html](#)
- Config/Status Download: [export.json](#)

Firmware Update: Start a firmware update.

SSL Certificate Upload: Saves your own SSL certificate. See chapter "SSL<sup>56</sup>" for the generation of a certificate in the right format.


Config Import File Upload: Loads a new configuration from a text file. To apply the new configuration, a "Restart Device" must be executed after the "Upload".

Config File Export: Saves the current configuration in a text file.

 Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed).

Restart Device: Restarts the device without changing the status of the relays.



 Some functions such as a firmware update or changing of the IP-address and HTTP settings require a restart of the device. A jump to the boot loader or a restart of the device lead by no means to a change of the relay states.

Restore Fab Settings and Restart Device: Performs a restart and resets the device to factory default [19](#).

Enter Bootloader Mode: Jumps into bootloader mode, where additional settings can be made with GBL\_Conf.exe.


Flush DNS Cache: All entries in the DNS cache are discarded and address resolutions are requested again.

Config/Status View: [status.html](#): Displays the status.html page with the JSON data.

Config/Status Download: [export.json](#): Direct file download of JSON data from status.html.


## 2.3.2 Configuration Management

The device configuration can be saved and restored in the maintenance area [16](#).

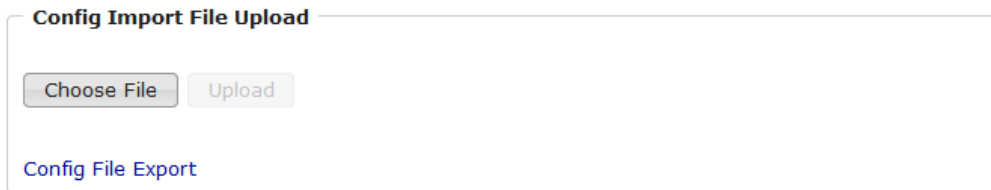

The screenshot shows a web interface for configuration management. At the top, it says "Config Import File Upload". Below this, there are two buttons: "Choose File" and "Upload". At the bottom of the interface, there is a link labeled "Config File Export".

The "Config File Export" function can be used to save the current configuration as a text file. The syntax used in the configuration file corresponds to the commands of the Telnet console. If the configuration of a device is to be restored from a text file, load the file with "Upload" and restart the device with "Restart Device".

 Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed). For the same reasons, it is advisable to carefully handle the generated configuration files when archiving.

### Editing the configuration file

It is possible to customize a saved configuration file with a text editor for your own needs. For example, one scenario would be to use a script language to automate the creation of many customized versions of a configuration, then equip a large number of devices with an individualized configuration. Also Upload and restart with CGI commands can be done in scripting languages. With use of the comment sign "#" you can quickly hide single commands or add personal notes.

If you modify a configuration file manually, it is not always clear which limits are allowed for parameters. After uploading and restarting, commands with invalid parameters are ignored. Therefore, the generated configuration includes comments describing the boundaries of the parameters. Where "range:" refers to a numeric value, and "len:" to a text

parameter. E.g:

```
email auth set 0 #range: 0..2  
email user set "" #len: 0..100
```

The command "system fabsettings" from the beginning of a generated configuration file brings the device into the factory state, and then executes the individual commands that modify the configuration state. It may be desirable to make the changes relative to the current configuration, and not out of the factory state. Then the "system fabsettings" should be removed.

## No output of default values

The configuration file contains (with exceptions) only values which differ from the default. The command "system fabsettings" (go to the factory state) from the beginning of a generated configuration file should not be removed, otherwise the device can get incompletely configured.

## Configuration via Telnet

The configuration files can in principle also be transferred in a Telnet session, but then the settings are changed during operation, and not completely when restarting, as it would have been the case with an upload. It can happen that events are triggered at the same time as the device is configured. One should therefore:

- a) disable the function
- b) completely parametrize
- c) reactivate the function

An example:

```
email enabled set 0  
email sender set "" #len: 0..100  
email recipient set "" #len: 0..100  
email server set "" #len: 0..100  
email port set 25  
email security set 0 #range: 0..2  
email auth set 0 #range: 0..2  
email user set "" #len: 0..100  
email passwd hash set "" #len: 0..100  
email enabled set 1 #range: 0..1
```

### 2.3.3 Bootloader Activation

The configuration of the device from the application "GBL\_Conf.exe" is only possible, if the device is in Bootloader Mode.

#### Activation of the Bootloader Mode

1) via push button:


- Hold both buttons for 3 seconds

2) or

 
- Remove the power supply
- Hold down the "Select" button. If the push button is recessed, use a pin or paper clip
- Connect the operating voltage

3) by Software:


- Start the "GBL\_Conf.exe" program
- Do a network search with the "Search" menu action
- Activate in menu "Program Device" the item "Enter Bootloader"

 This function is only possible if "Enable FW to BL" was activated in the application "GBL\_Conf.exe" before, while the device was already in the bootloader.

4) via web interface:

Press "Enter Bootloader Mode" on the maintenance  web page.

Whether the device is in Bootloader mode, is indicated by the flashing of the status LED, or it is shown in "GBL\_Conf.exe" application after a renewed device search (appendix "BOOT-LDR" after the device name). In Bootloader mode the program "GBL\_Conf.exe" can disable the password and the IP ACL, perform a firmware update, and restore the factory settings.

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

## Abandonment of the Bootloader Mode

1) via push button:


- Hold both buttons for 3 seconds (only if the device has 2 buttons)

2) or

- Remove and connect the power supply without operating a button

3) by Software:

- Start the "GBL\_Conf.exe" application
- Do a network search with the "Search" menu action
- In menu "Program Device" activate the item "Enter Firmware"

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

## Factory Reset

If the device is in bootloader mode, it can always be put back to its factory default. All TCP/IP settings are reset in this operation.

 If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

1) via push button:

- Activate the Bootloader Mode of the device
- Hold down the button (or the "Select" button for devices with 2 buttons) for 6 seconds.  
If the push button is recessed, use a pin or paper clip
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

2) by Software:

- Activate the Bootloader Mode of the device
- "Start the GBL\_Conf.exe" program
- In menu "Program Device" activate the item "Reset to Fab Settings"
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

# Configuration

## 3 Configuration

### TCP/IP configuration by DHCP

After switching on the device is scanning on the Ethernet for a DHCP server and requests an unused IP address. Check the IP address that has been assigned and adjust if necessary, that the same IP address is used at each restart. To turn off DHCP use the software GBL\_Conf.exe or use the configuration via the web interface.

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

## 3.1 Ethernet

### 3.1.1 IP Address

[IP Address](#) · [IP ACL](#) · [HTTP Server](#)

**Hostname**

Hostname:

**IPv4**

Use IPv4 DHCP:  yes  no

IPv4 Address:

IPv4 Netmask:

IPv4 Gateway address:

IPv4 DNS address:

**IPv6**

Use IPv6 Protocol:  yes  no

Use IPv6 Router Advertisement:  yes  no

Use DHCP v6:  yes  no

Use manual IPv6 address settings:  yes  no

Hostname: Here you can enter a name with up to 63 characters. This name will be used for registration on the DHCP server.



Special characters and umlauts can cause problems in the network.


IPv4 Address: The IP address of the device.

IPv4 Netmask: The network mask used in the network.

IPv4 Gateway address: The IP address of the gateway.

IPv4 DNS address: The IP address of the DNS server.

Use IPv4 DHCP: Select "yes" if the TCP/IP settings should be obtained directly from the DHCP server: When the function is selected, each time the device powers up it is checked if a DHCP server is available on the network.

 If no DHCP server is available, the last IP address is used. However, the DHCP client tries to reach a DHCP server again every 5 minutes. The DHCP request lasts one minute until it is aborted. During this time the IP-address is not accessible! It is therefore essential to deactivate DHCP for a static IP addresses!

Use IPv6 Protocol: Activates IPv6 usage.

Use IPv6 Router Advertisement: The Router Advertisement communicates with the router to make global IPv6 addresses available.


Use DHCP v6: Requests from an existing DHCPv6 server addresses of the configured DNS server.

Use manual IPv6 address settings: Activates the entry of manual IPv6 addresses.

IPv6 status: Displays the IPv6 addresses over which the device can be accessed, and additionally DNS and router addresses.

**IPv6 status**

Current IPv6 status:	IPv6 Addr: fe80::219:32ff:fe00:996d 2007:7dd0:ffc1:l:219:32ff:fe00:996d
	IPv6 DNS Server: 2007:7dd0:ffc1:1:20c:29ff:feaf:93c
	IPv6 Router: fe80::20c:29ff:feaf:93c

 For IP changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

## Manual IPv6 Configuration

**IPv6 (manual)**

IPv6 Addresses:	<input type="text" value="2007:7dd0:ffc1:0:219:32ff:fe00:996d"/>	/ 64
	<input type="text"/>	/ 64
	<input type="text"/>	/ 64
	<input type="text"/>	/ 64
IPv6 DNS addresses:	<input type="text" value="2007:7dd0:ffc1:0:20c:29fffeaf:93c"/>	
	<input type="text"/>	
IPv6 Gateway address:	<input type="text" value="fe80::20c:29ff:feaf:93c"/>	

The input fields for the manual setting of IPv6 addresses allow you to configure the prefix of four additional IPv6 device addresses, and to set two DNS addresses, and a gateway.

## 3.1.2 IP ACL

[IP Address](#) · [IP\\_ACL](#) · [HTTP Server](#)

**ICMP Ping**

Reply ICMP ping requests:  yes  no


**IP Access Control List**


Enable IP filter:  yes  no

1. Grant IP access to host/net:	<input type="text" value="1234::4ef0:eec1:0:219:32ff:fe00:f124"/>	-	+
2. Grant IP access to host/net:	<input type="text" value="192.168.1.84"/>	-	+
3. Grant IP access to host/net:	<input type="text" value="mypc.locdom"/>	-	+
4. Grant IP access to host/net:	<input type="text" value="192.168.1.0/24"/>	-	+
5. Grant IP access to host/net:	<input type="text" value="1234:4ef0:eec1:0::/64"/>	-	+

Reply ICMP ping requests: If you enable this feature, the device responds to ICMP pings from the network.

Enable IP filter: Enable or disable the IP filter here. The IP filter represents an access control for incoming IP packets.

 Please note that when IP access control is enabled HTTP and SNMP only work if the appropriate servers and clients are registered in the IP access control list.

 If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL\_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.



## 3.1.3 HTTP

[IP Address](#) · [IP ACL](#) · [HTTP Server](#)

### HTTP

HTTP Server option:  HTTP + HTTPS  
 HTTP redirects to HTTPS  
 HTTPS only  HTTP only

Server port HTTP:   
Server port HTTPS:   
Supported TLS versions:   
Enable Ajax autorefresh:  yes  no

### HTTP Password

Enable password protection:  yes  no  
Use radius server passwords:  yes  no  
Use locally stored passwords:  yes  no

Set new **admin** password:  (32 characters max)  
Repeat **admin** password:

Set new **user** password:  (32 characters max)  
Repeat **user** password:

HTTP Server option: Selects whether access is possible only with HTTP, HTTPS, or both.

Server port HTTP: Here can be set the port number of the internal HTTP. Possible values are from 1 to 65534 (default: 80). If you do not use the default port, you must append the port number to the address with a colon to address the device from a web browser. Such as: "http://192.168.0.2:800"

Server port HTTPS: The port number to connect the web server via the SSL (TLS) protocol.

Supported TLS versions: Limits the supported TLS versions.

Enable Ajax autorefresh: If this is activated, the information of the status page is automatically updated via http request (AJAX).





For some HTTP configuration changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

Enable password protection: Password access protection can be activated. If the admin password is assigned, you can only log in by entering this password to change settings. Users can log in by entering the user password in order to query the status information and initiate switching operations.

Use radius server passwords: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally. In this case, an admin password and a user password must be assigned. The password can have a maximum of 31 characters. The name "admin" and "user" are provided for the user name in the password entry mask of the browser. In factory settings, the password for the admin is set to "admin" or "user" for the user password.

 If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the SHA2-256 hash. If you want to change a password, the complete password must always be re-entered.

 If you have forgotten your password, please activate the bootloader mode and then turn off the password prompt in GBL\_Conf.exe.

## 3.2 Protocols

### 3.2.1 Console

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

#### TCP/IP Console

Enable Telnet:  yes  no  
Telnet TCP port:   
Raw mode:  yes  no  
Active negotiation:  yes  no  
Activate echo:  yes  no  
Push messages:  yes  no  
Delay after 3 failed logins:  yes  no

---

Enable SSH:  yes  no  
SSH TCP port:   
Activate echo:  yes  no  
Push messages:  yes  no

---

Require user login (Telnet/SSH):  yes  no  
Use radius server passwords:  yes  no  
Use locally stored passwords:  yes  no  
Username:   
Set new password:  (32 characters max)  
Repeat password:   
Upload new SSH public key:

Enable Telnet: Enables Telnet console .

Telnet TCP port: Telnet sessions are accepted on this port.

Raw mode: The VT100 editing and the IAC protocol are disabled.

Activate echo: The echo setting if not changed by IAC.

Active negotiation: The IAC negotiation is initiated by the server.

Require user login: Username and password are required.

Delay after 3 failed logins: After 3 wrong entries of username or password, the next login attempt is delayed.

Use radius server passwords: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally

## 3.2.2 Syslog

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**Syslog**

Enable Syslog:  yes  no

Syslog server:

Enable Syslog: Enables the usage of Syslog Messages.

Syslog Server: If you have enabled Syslog Messages, enter the IP address of the server to which the syslog information should be transmitted.

## 3.2.3 SNMP

### SNMP

Enable SNMP options:  SNMP get  SNMP set

SNMP UDP port:

sysContact:

sysName:

sysLocation:

### SNMP v2

Enable SNMP v2:  yes  no

SNMP v2 public Community:  (16 char. max)

SNMP v2 private Community:  (16 char. max)

### SNMP v3

Enable SNMP v3:  yes  no

SNMP v3 Username:  (32 char. max)

SNMP v3 Authorization Algorithm:

Set new **Authorization** password:  (8 char. min, 32 char. max)

Repeat **Authorization** password:

SNMP v3 Privacy Algorithm:

Set new **Privacy** password:  (8 char. min, 32 char. max)

Repeat **Privacy** password:

### SNMP Traps

Send SNMP Traps:

SNMP trap receiver 1 :

SNMP-get: Enables the acceptance of SNMP-GET commands.

SNMP-set: Allows the reception of SNMP-SET commands.


SNMP UDP Port: Sets the UDP port where SNMP messages are received.

sysContact: Value of RFC 1213 sysContact.

sysName: Value of RFC 1213 sysName.

sysLocation: Value of RFC 1213 sysLocation.

Enable SNMP v2: Activates SNMP v2.

 Because of security issues, it is advisable to use only SNMP v3, and to disable SNMP v2. Accesses to SNMP v2 are always insecure.

Community public: The community password for SNMP GET requests.

Community private: The community password for SNMP SET requests.

Enable SNMP v3: Activates SNMP v3.

SNMP v3 Username: The SNMP v3 User Name.

SNMP v3 Authorization Algorithm: The selected Authentication Algorithm.

SNMP v3 Privacy Algorithm: SNMP v3 Encryption Algorithm..



If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the key formed using the Authorization Algorithm. If you want to change a password, the complete password must always be re-entered.



The calculation of the password hashes varies with the selected algorithms. If the Authentication or Privacy algorithms are changed, the passwords must be re-entered in the configuration dialog. "SHA-384" and "SHA512" are calculated purely in software. If "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

Send SNMP traps: Here you can specify whether, and in what format the device should send SNMP traps.

SNMP trap receiver: You can insert here up to eight SNMP trap receiver.

MIB table: The download link to the text file with the MIB table for the device.

More information about SNMP settings are available from our support or can be found on the Internet at [www.gude.info/wiki](http://www.gude.info/wiki).

## 3.2.4 Radius

**Radius**

Enable Radius Client:  yes  no

Authentication Protocol:  PAP  CHAP

Use Message Authentication:  yes  no

Default Session Timeout:

Primary Server:

Set new shared secret:

Repeat new shared secret:

Timeout:

Retries:

Use backup server:  yes  no

Backup Server:

Set new shared secret:

Repeat new shared secret:

Timeout:

Retries:

Enable Radius Client: Enables validation over Radius.

Use CHAP: Use CHAP password encoding.

Use Message Authentication: Adds the "Message Authentication" attribute to the Authentication Request.

Primary Server: Name or IP address of the Primary Radius server.

Shared secret: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

Timeout: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

Use Backup Server: Activates a Radius Backup server.

Backup Server: Name or IP address of the Radius Backup server.

Shared secret: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

Timeout: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

**Test Radius Server**

Test Username:

Test Password:

Test Username: Username input field for Radius test.

Test Password: Password input field for Radius test.

The "Test Radius Server" function allows you to check whether a combination of Username and Password is accepted by the configured Radius Servers.

## 3.2.5 Modbus TCP

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**Modbus TCP**

Enable Modbus TCP:  yes  no

Modbus TCP port:

Enable Modbus TCP: Enables Modbus TCP support.

Modbus TCP port: The TCP/IP port number for Modbus TCP.

## 3.2.6 MQTT

**MQTT**

Enable MQTT:  yes  no

Broker:

TLS:  yes  no

TCP Port:  (Default: 8883)

Username:

Set new password:

Repeat password:

Client ID:

Quality of Service (QoS):  ▼

Keep-alive ping interval:  s (minimum 10s)

Topic Prefix:   
de/gudesystems/epc/00:19:32:01:16:41

Permit CLI commands:  yes  no

Publish device data summary interval:  s (0=disabled)

Enable MQTT: Enables MQTT support.

Broker: DNS or IP address of the MQTT broker.


TLS: Turns on TLS encryption.

Mode TCP port: The TCP/IP port number of the broker.

Username: The MQTT username.

password: The password for the username.

Client ID: The MQTT client ID.

 The client IDs of a user must be different! If two clients of a user have the same name, the connection of one client is normally terminated.

Quality of Service (QoS): Sets the QoS value (0 or 1) of the MQTT publishes.

Keep-alive ping interval: This defines the time interval in which the client sends an MQTT ping.

Topic prefix: Defines the beginning of the topic with which all messages are sent. The strings **[mac]** and **[host]** symbolize the MAC address or the hostname of the device.

Permit CLI commands: Enables the execution of console commands.

Publish device data summary interval: Time interval in which messages with the global status of the device are sent.



## MQTT Logs

- MQTT client connected
- MQTT sending client id:'client\_1641' username:'epc-user'
- MQTT broker connected
- MQTT broker DNS resolved
- MQTT broker DNS not yet resolved
- MQTT resolving host 'f3c06b76137c48439e81c18b11bd06ab.s1.eu.hivemq.cloud' TCP port 8883

## MQTT Broker Status

- Broker DNS ready, connected since 71 seconds
- Last publish 11 seconds ago

MQTT Logs: Outputs individual log messages about the connection setup.

MQTT Broker Status: Time information about connection duration, the last publish and the last keep-alive.

## 3.3 Clock


---

### 3.3.1 NTP

[NTP](#) · [Timer](#)

#### NTP

Enable Time Synchronization:  yes  no

Primary NTP server:  

· reply 12s ago, 59ms signal delay  
· Mon Oct 11 2021 13:49:46 GMT+0200 (Central European Summer Time)

Backup NTP server:  

#### Timezone:

Timezone:

Daylight Saving Time (DST):  yes  no

#### Clock

Current Systemtime (UTC): 11:49:59 11.10.2021 (1633952999)

Current Localtime: 13:49:59 11.10.2021

Browstime: 13:49:58 11.10.2021

Set clock:

Enable Time Synchronization: Enables the NTP protocol.

Primary NTP server: IP address of the first NTP server.


Backup NTP server: IP address of the second NTP server. Used when the first NTP server does not respond.

Timezone: The set time zone for the local time.

Daylight Saving Time: If enabled, the local time is converted to Central European Summer Time.

set manually: The user can set a time manually.

set to Browsetime: Sets the time corresponding to web browser.

 If Time synchronization is enabled, a manual time will be overwritten at the next NTP synchronization.

## 3.3.2 Timer

### Timer - Basic Settings

Enable Timer:  yes  no

Syslog verbosity level:

### Timer - Rules

Enable Timer: enables or disables all timers globally.


Syslog verbosity level: Sets the verbosity level for timer syslog output.


New Rule simple Timer: Shows a dialog for a simple timer rule.

New Rule advanced Timer: Brings up the dialog for advanced timer settings.

## 3.3.3 Timer Configuration

In the timer configuration you have three options: Create a simple timer, add a complex timer, or change an existing configuration.

 Timer rules are only executed if the device has a valid time. See configuration NTP <sup>33</sup>.

 This instruction chapter applies to all Gude devices. For devices without switchable ports you can only create a complex timer. For an action there is only the register "Action CLI" available, and not the register "Action PortSwitch".

**Timer - Basic Settings**

Enable Timer:  yes  no

Syslog verbosity level:

**Timer - Rules**

New Rule: simple Timer

New Rule: advanced Timer

## Creating a simple timer

If you activate "New Rule: simple Timer" the following dialog is displayed:

**Timer Rule** [x]

Switch

From  :  To  :

On weekdays:  Mon  Tue  Wed  Thu  Fri  Sat  Sun

You set here which port should be switched for which time period, and on which days of the week the rule is active. In this example the period 9:00 to 17:00 is changed to 9:30 to 11:00 compared to the default input mask. Also, this rule should not be applied on Saturday and Sunday. The rule we have now says that every day, except Saturday and Sunday, port 1 will be switched on at 9:30 and switched off after 1.5 hours. Clicking on "Save" saves this rule.

**Timer - Rules**

🕒 Rule 1: '1: Power Port' 09:30 On

🕒 Rule 2: '1: Power Port' 11:00 Off

New Rule: simple Timer

New Rule: advanced Timer

We have now created 2 rules, one for when the port is turned on and the second for when it is turned off.

## Creating a complex timer

# Configuration

If you create a complex timer or change an existing timer, you will always see an extended dialog. Here, ports can be switched as well as other actions can be executed via CLI commands. The setting of the switching times is more granular.

Timer - Rule 1: '1: Power Port' 09:30 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Hours: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Minutes: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59


Days: 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31

Month: 01 02 03 04 05 06 07 08 09 10 11 12

Days of week: Mon Tue Wed Thu Fri Sat Sun

Delete Save Cancel

You can see here the extended representation of the first rule of the simple timer from the previous example. The action is started every day of every month at 9:30. The weekdays Saturday and Sunday are excluded. An existing rule can be removed with the "Delete" button.

 If a rule is deleted, the following rules move up. The numbering of the following rules also changes by one. This also applies to the index in the console commands.

Timer - Rule 1: '1: Power Port' 09:30 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Rule Name: '1: Power Port' 09:30 On

Rule Valid from: [ ] to [ ] dd.mm.yyyy

Random Trigger Probability: 100


Random Trigger Jitter: 0 secs

enable trigger:  yes  no

Action mode:  Switch Power Ports  Perform CLI Cmd

Delete Save Cancel


A simple timer is directly "enabled", for a newly created complex timer "enable trigger" must be switched on manually. You can set a probability and a jitter for the timer rules. This makes random events possible. In this example the rule is executed with 100% probability. A jitter of 0 means that the action takes place exactly at the programmed time. Ports are switched as action mode, alternatively a console command (CLI Cmd) can be executed.

 After changes to existing timers, the "Rule Name" may no longer be meaningful. To keep the overview, it may be useful to adjust the name.

On	On	On	On	On	On	On	On
Off	Off	Off	Off	Off	Off	Off	Off

On	-	-	-	-	-	-	-
Off	-	-	-	-	-	-	-

The switching function can be set in more detail on the "Action PortSwitch" register. Port 1 is switched on. You could extend the rule and switch more ports on or off. Additionally you can set a time for a batchmode in the field after "Between Action1 and Action 2 : wait", which starts "Action 2" after expired time. However, the batch mode has the disadvantage that it is not automatically restarted when the device is rebooted. Also, the port is locked against manual operation on the web page as long as the batch mode is running.

 The "Action PortSwitch" function is only available for devices with switchable ports.

## Extending a rule

For demonstration purposes, here is an extension to the simple timer from the previous example:

Hours: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23


Minutes: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59

Days: 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31

Month: 01 02 03 04 05 06 07 08 09 10 11 12


Days of week: Mon Tue Wed Thu Fri Sat Sun


The action is now started not only at 9:30, but also at 17:30. There are other changes: The timer is only active between October and December, also the action does not take place on the first day of a month.

 Since all fields in the mask are always considered, it is not possible to define the times 9:30 and 17:10 in a single timer rule. You need a second rule for this. If you set the hours 9 and 17, as well as the minutes 10 and 30, then the four times 9:10, 9:30,

# Configuration

17:10 and 17:30 would be programmed.

 To change a field in this input mask without changing the state of the other fields, the Ctrl key must be pressed during the mouse click.

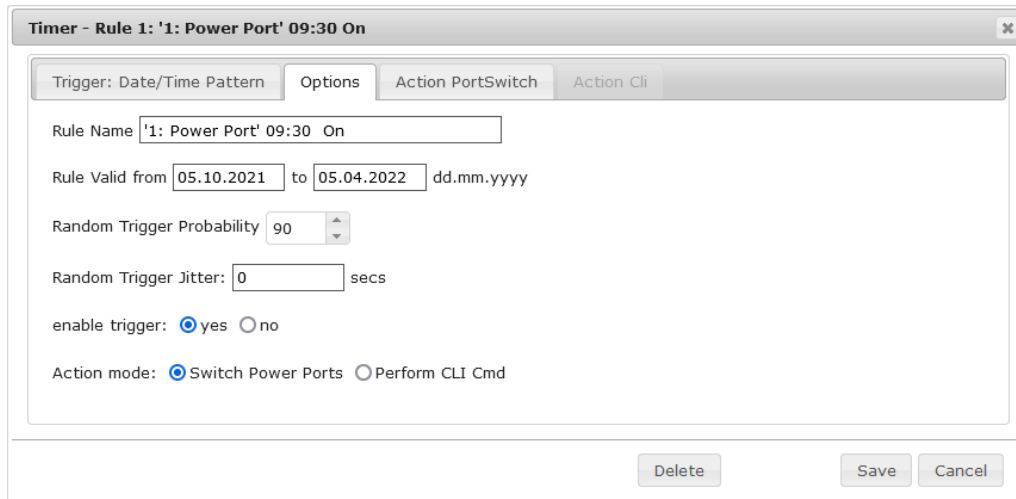

Timer - Rule 1: '1: Power Port' 09:30 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Rule Name: '1: Power Port' 09:30 On

Rule Valid from: 05.10.2021 to 05.04.2022 dd.mm.yyyy

Random Trigger Probability: 90


Random Trigger Jitter: 0 secs

enable trigger:  yes  no

Action mode:  Switch Power Ports  Perform CLI Cmd

Delete Save Cancel

For this rule, on the "Options" tab, the time period is limited to the range between 5.10.2021 and 5.4.2022. In this example, the timer rule is only executed with a probability (Random Trigger Probability) of 90%.

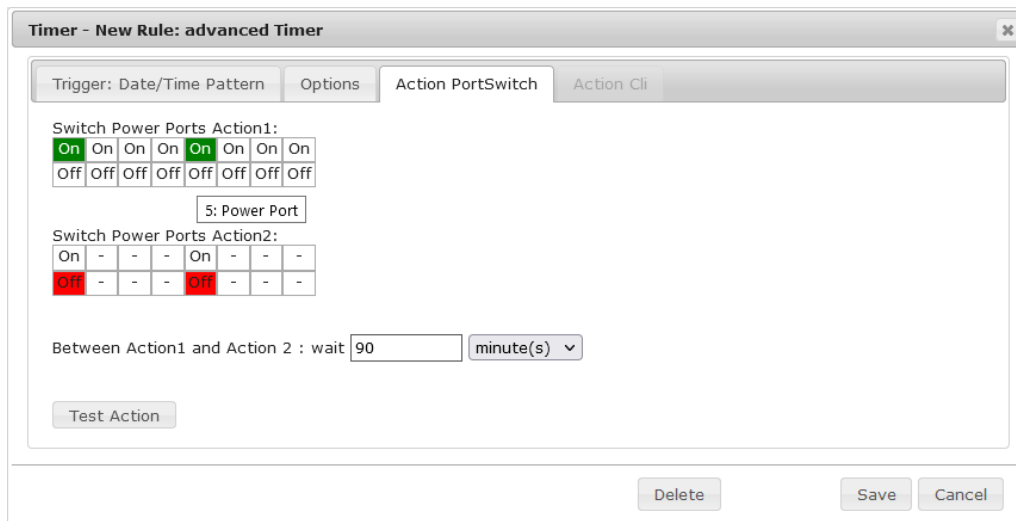

Timer - New Rule: advanced Timer

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Switch Power Ports Action1:

On	On	On	On	On	On	On	On
Off	Off	Off	Off	Off	Off	Off	Off

5: Power Port

Switch Power Ports Action2:


On	-	-	-	On	-	-	-
Off	-	-	-	Off	-	-	-

Between Action1 and Action 2 : wait 90 minute(s)

Test Action

Delete Save Cancel

In this example, port 1 and port 5 are enabled and disabled after 90 minutes by batch mode.

 A popup on the mouse pointer shows the port number of the field.

## Console Commands

Timer - New Rule: advanced Timer

Trigger: Date/Time Pattern   Options   Action PortSwitch   Action Cli

Perform CLI Command:

```
port 1 reset
port 3 state set 1
```

31/64

Test Action

Delete   Save   Cancel

Instead of switching a port, one or more console commands can be executed. These commands are entered in the "Action CLI" register. The "Action CLI" tab can only be selected if the option "Perform CLI Cmd" is activated in "Options".

## Example Switching a Port on a Date

If you want to switch on a timer on a certain date at a certain time and switch it off at a later time, you cannot do it directly with a simple timer. Therefore it can be useful to create the timer as a simple timer first, and then customize it in the advanced dialog.

Timer Rule

Switch 3: Power Port   On

From 09:25 To 17:30

On weekdays:  Mon  Tue  Wed  Thu  Fri  Sat  Sun

Save   Cancel

Switch port 3 on every day at 9:25, and off again at 17:30. You save.

Timer - Rule 4: '3: Power Port' 09:25 On

Trigger: Date/Time Pattern   Options   Action PortSwitch   Action Cli

Rule Name '3: Power Port' 09:25 On

Rule Valid from 24.10.2021 to 24.10.2021 dd.mm.yyyy

Random Trigger Probability 100

Random Trigger Jitter: 0 secs

enable trigger:  yes  no

Action mode:  Switch Power Ports  Perform CLI Cmd

Delete   Save   Cancel

Then call up the two timer rules you created ("On" and "Off") and enter the date on which the switching operation is to take place in the "Options" tab.

## Example blind control

The screenshot shows a configuration window titled "Timer - New Rule: advanced Timer". It has four tabs: "Trigger: Date/Time Pattern", "Options", "Action PortSwitch", and "Action Cli". The "Options" tab is active. The configuration fields are as follows:

- Rule Name:
- Rule Valid from:  to  dd.mm.yyyy
- Random Trigger Probability:  (with up/down arrows)
- Random Trigger Jitter:  secs
- enable trigger:  yes  no
- Action mode:  Switch Power Ports  Perform CLI Cmd

At the bottom right, there are three buttons: "Delete", "Save", and "Cancel".

You can use the jitter e.g. for a shutter control. In the classic example of a shutter control, you do not always want to raise and lower the shutters at the same time in order to confuse potential burglars. The jitter of 1800 seconds means that the action is executed randomly in a period between 30 minutes before and 30 minutes after the programmed time. The probability (Random Trigger Probability) of execution here is 100%.



## 3.4 Sensors

**Sensors Config**  
Sensor: 1: 7106 - 7106  
Sensor Name: 7106  
Select Sensor Field: Temperature (°C)  
Enable value-threshold message trigger:  yes  no  
Maximum value: 65.0 °C  
Minimum value: 25.0 °C  
Hysteresis: 3.0 °C  
When above Max value: Switch port 1: Power Port to Off  
When below Max value: Switch port 1: Power Port to On  
When above Min value: Switch port 2: Power Port to On  
When below Min value: Switch port 2: Power Port to Off  
Enable time-interval message trigger:  yes  no  
every 10 second(s)  
for Console- and MQTT channels  
Enable value-delta message trigger:  yes  no  
every value step of 5.0 °C  
for Console- and MQTT channels  
Message channels:  Syslog  SNMP  Email  Console  
 MQTT: normal MQTT message  
 Beeper: Beeper mode : continous  
 Flashing display

**Misc sensor options**  
Min/Max measurement period: 24 Hours  
Enable beeper for AC alarms:  yes  no  
Enable beeper for sensor alarms:  yes  no

**Sensor:** Selects a sensor type to configure it. The first digit "1:" indicates the number of the sensor port (only important for devices with more than one sensor port). This is followed by the sensor name, and the adjustable sensor name.

**Sensor Name:** Changeable name for this sensor. For example, you can give the temperature and the humidity a different name, even if they belong to the same sensor.

**Select Sensor Field:** Selects a data channel from a sensor.

**Enable value-threshold message trigger:** Enables monitoring of sensor threshold values.

**Maximum/Minimum value:** Adjustable threshold values at which messages should be sent via console (Telnet/SSH), SNMP trap, Syslog, MQTT or e-mail.

**Hysteresis:** Defines the distance that must be exceeded after a limit value of an external sensor has been exceeded in order to signal that the limit value has fallen below.

**When above/below Min/Max value Switch Port:** Switches a port depending on the exceeding or falling below of a limit value.

Enable time interval message trigger: Generates console (Telnet/SSH) and MQTT messages within time intervals.

Enable value-delta message trigger: Generates console (Telnet/SSH) and MQTT messages when a sensor value deviates by a delta value.

Message channels: Enables the generation of messages on different channels.

For the beeper, you can choose between a continuous and an interrupted tone. Flashing display causes the 7-segment display to flash. Pressing a front panel button resets the beeper and the flashing display.

Min/Max measurement period: Selects the time range for the sensor min/max values on the overview web page.

Enable beeper for AC alarms: Activates the beeper for all AC limit messages.

Enable beeper for sensor alarms: Activates the beeper for all sensor limit messages.

## Hysteresis Example:

A Hysteresis value prevents that too much messages are generated, when a sensor value is jittering around a sensor limit. The following example shows the behavior for a temperature sensor and a hysteresis value of "1". An upper limit of "50 °C" is set.

Example:

49.9 °C - is below the upper limit  
50.0 °C - a message is generated for reaching the upper limit  
50.1 °C - is above the upper limit

...

49.1 °C - is below the upper limit, but in the hysteresis range  
49.0 °C - is below the upper limit, but in the hysteresis range  
48.9 °C - a message is generated for underrunning the upper limit inclusive hysteresis range

...

## 3.5 E-Mail

---

**E-Mail**  
Enable E-Mail:  yes  no  
Sender address:   
Recipient address:   
SMTP server:   
SMTP server port:  (Default: 587)  
SMTP Connection Security:  ▾

**Authentication**  
SMTP Authentication (password):  ▾  
Username:   
Set new password:   
Repeat password:

**Enable E-Mail:** Activates the E-Mail dispatch of messages.

**Sender address:** The E-Mail address of the sender.

**Recipient address:** The E-Mail address of the recipient. Additional E-Mail addresses, separated by comma, can be specified. The input limit is 100 characters.

**SMTP Server:** The SMTP IP-address of the E-Mail server. Either as FQDN, e.g: "mail.gmx.net", or as IP-address, e.g: "213.165.64.20". If required, attach a designated port, e.g: "mail.gmx.net:25".

**SMTP server port:** The port address of the E-Mail server. In the normal case this should be the same as the default, that is determined by the setting **SMTP Connection Security**.


**SMTP Connection Security:** Transmission via SSL or no encryption.

**SMTP Authentication (password):** Authentication method of the E-Mail Server.

**Username:** User name that is registered with the SMTP E-Mail server.

**Set new password:** Enter the password for the login to the E-Mail server.

**Repeat password:** Enter the password again to confirm it.

 If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the password is never shown itself. If you want to change a password, the complete password must always be re-entered.

**E-Mail Logs:** Logging of E-Mail system messages.

## 3.6 Front Panel

---

**Front Panel**

Button Lock:  yes  no

Allow switching all ports:  yes  no

Display 1 default:

Apply

Button Lock: Disables the front buttons (activates the key lock) with the exception of the bootloader activation.

Allow switching all ports: Allows to switch all ports on or off with the front panel buttons.

Display 1 default: Selects what sensor is displayed in the display.


# Specifications

## 4 Specifications

 
 

### 4.1 Automated Access

---

The device can be accessed automatically via four different interfaces, which offer different possibilities to access the configuration data and status information. Only http and the console (telnet and serial) provide full access to the device.

 This chapter is general for all Gude devices. Depending on the device model are ports, certain sensors or other features not available.

List of different access options:

Interface	Scope of Access
HTTP	read / write status of Power Ports (relays or eFuses) read / write all configuration data read / write all status information (full access to the device)
Console 	read / write status of Power Ports (relays or eFuses) read / write all configuration data read / write all status information (full access to the device)
SNMP 	read / write status of Power Ports (relays or eFuses) read / write names of Power Ports (relays or eFuses) read / write status of Port start configuration read / write status Buzzer read / write configuration of power sources (EPC 8291) read / write fan configuration (EPC 8291) read measurement values of external sensors read measurement values of all energy sensors read NTP time and status resetting the energy meters read the status of Overvoltage Protection
Modbus TCP 	read / write status of Power Ports (relays or eFuses) read status of Inputs read / write configuration of power sources (EPC 8291) read / write fan configuration (EPC 8291) read measurement values of external sensors read measurement values of all energy sensors read the status of Overvoltage Protection
MQTT	Execute console commands

The device can be controlled via HTTP interface with CGI commands and returns the internal configuration and status in JSON format. The structure of the CGI commands and the JSON data is explained in more detail in our Wiki article:  
[http://wiki.gude.info/EPC\\_HTTP\\_Interface](http://wiki.gude.info/EPC_HTTP_Interface)

### 4.2 Messages

---

Depending on adjustable events, various messages can be sent from the device. The fol-

# Specifications

Following message types are supported:

- Sending of e-mails
- SNMP Traps
- Syslog messages

## E-Mail messages

Email messages are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

## SNMP Traps

SNMP Traps are system messages that are sent via the SNMP protocol to different recipients. SNMP traps are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

## Syslog messages

Syslog messages are simple text messages that are sent via UDP to a syslog server. Under Linux, normally a syslog daemon is already running (eg. syslog-ng), for Microsoft Windows systems some freeware programs are available on the market. The syslog messages are sent for the following events:

- Turning on the device
- Enable/disable of syslog in the configuration
- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

	SNMP Trap	Console	MQTT	Syslog	Email
<b>Global</b>					
Device started	x	x	x	x	x
Syslog switched on/off				x	
MQTT connection established			x	x	
MQTT connection lost				x	
<b>Value-Threshold</b>					
external sensors Current, differential current Type A	x	x	x	x	x
<b>Time-Interval</b>					
external sensors Current, differential current type A		x	x		
<b>Value-Delta</b>					
external sensors		x	x		

Current, differential current type A					
---	--	--	--	--	--

## SNMP traps

There are common traps for state changes of the same device resource. For example, a SwitchEvtPort trap is sent when a port is turned on or off. The state change itself is conveyed by the supplied data within the trap.

## MQTT published data

Messages on the MQTT channel are sent in JSON format.

Example switch a port: `{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}`

## Console Push Messages

Push messages can be activated on the console channels (Telnet, SSH or serial console), which output sensor values at timed intervals (every n seconds) or as of a configurable change in the magnitude of the sensor value on that channel. The generated message always starts with a "#" and ends with a CR/LF.

Example: Switch a port: `#port 2 ON`

If you open a telnet or SSH connection, the push messages are either preconfigured, or you switch on the push messages temporarily with `console telnet pushmsgs set 1` (or `console ssh pushmsgs set 1`). From now on, push messages will be sent asynchronously on this channel. The asynchronous nature of the messages can cause problems on a connection if you send commands yourself at the same time. There are then the possibilities:

- Filter all incoming characters between "#" and CR/LF
- or open a second channel (Telnet, SSH, serial) and switch on the push messages there.

## 4.3 IP ACL

---


### IP Access Control List

The IP Access Control List (ACL IP) is a filter for incoming IP packets. If the filter is active, only the hosts and subnets whose IP addresses are registered in the list, can contact via HTTP or SNMP, and make changes. For incoming connections from unauthorized PCs, the device is not completely transparent. Due to technical restraints, a TCP/IP connection will be accepted at first, but then rejected directly.

Examples:



Entry in the IP ACL	Meaning
192.168.0.123	the PC with IP Address "192.168.0.123" can access the device
192.168.0.1/24	all devices of subnet "192.168.0.1/24" can access the device
1234:4ef0:eec1:0::/64	all devices of subnet "1234:4ef0:eec1:0::/64" can access the device

 If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL\_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

## 4.4 IPv6

---

### IPv6 Addresses

IPv6 addresses are 128 bit long and thus four times as long as IPv4 addresses. The first 64 bit form a so-called prefix, the last 64 bit designate a unique interface identifier. The prefix is composed of a routing prefix and a subnet ID. An IPv6 network interface can be reached under several IP addresses. Usually this is the case under a global address and the link local address.

### Address Notation

IPv6 addresses are noted in 8 hexadecimal blocks at 16 bit, while IPv4 normally is noted in decimal. The separator is a colon, not a period.

E.g.: 1234:4ef0:0:0:0019:32ff:fe00:0124

Leading zeros may be omitted within a block. The previous example can be rewritten as:

1234:4ef0:0:0:19:32ff:fe00:124

One may omit one or more successive blocks, if they consist of zeros. This may be done only once within an IPv6 address!

1234:4ef0::19:32ff:fe00:124

One may use the usual decimal notation of IPv4 for the last 4 bytes:

1234:4ef0::19:32ff:254.0.1.36

## 4.5 Radius

---

The passwords for HTTP, telnet, and serial console (depending on the model) can be stored locally and / or authenticated via RADIUS. The RADIUS configuration supports a primary server and a backup server. If the primary server does respond, the RADIUS re-

quest is sent to the backup server. If the local password and RADIUS are enabled at the same time, the system is first checking locally, and then in the event of a failure the RADIUS servers are contacted.

## RADIUS attributes

The following RADIUS attributes are evaluated by the client:

**Session-Timeout:** This attribute specifies (in seconds) how long an accepted RADIUS request is valid. After this time has elapsed, the RADIUS server must be prompted again. If this attribute is not returned, the default timeout entry from the configuration is used instead. Please set this value to 300 seconds or greater to prevent the radius requests from becoming too large.

**Filter-Id:** If the value "admin" is set for this attribute, then an admin rights are assigned for the login, otherwise only user access.

**Service-Type:** This is an alternative to Filter-Id. A service type of "6" or "7" means admin rights for the HTTP login, otherwise only limited user access.

## HTTP Login

The HTTP login takes place via Basic Authentication. This means that it is the responsibility of the web server, how long the login credentials are temporarily stored there. The RADIUS parameter "Session-Timeout" therefore does not determine when the user has to login again, but at what intervals the RADIUS servers are asked again.

## 4.6 SNMP

---

SNMP can be used for status information via UDP (port 161). Supported SNMP commands are:

- GET
- GETNEXT
- GETBULK
- SET

To query via SNMP you need a Network Management System, such as HP OpenView, OpenNMS, Nagios etc., or the simple command line tools of NET-SNMP software. The device supports SNMP protocols v1, v2c and v3. If traps are enabled in the configuration, the device messages are sent as notifications (traps). SNMP Informs are not supported. SNMP Requests are answered with the same version with which they were sent. The version of the sent traps can be set in the configuration.

### MIB Tables

The values that can be requested or changed by the device, the so-called "Managed Objects", are described in Management Information Bases (MIBs). These substructures are subordinate to so-called "OID" (Object Identifiers). An OID digit signifies the location of a value inside a MIB structure. Alternatively, each OID can be referred to with its symbol name (subtree name). The device's MIB table can be displayed as a text file by clicking on the link "MIB table" on the SNMP configuration page in the browser.

## SNMP v1 and v2c


SNMP v1 and v2c authenticates the network requests by so-called communities. The SNMP request has to send along the so-called community public for queries (read access) and the community private for status changes (write access). The SNMP communities are read and write passwords. In SNMP v1 and v2 the communities are transmitted unencrypted on the network and can be easily intercepted with IP sniffers within this collision domain. To enforce limited access we recommend the use of DMZ or IP-ACL.

## SNMP v3

Because the device has no multiuser management, only one user (default name "standard") is detected in SNMP v3. From the User-based Security Model (USM) MIB variables, there is a support of "usmStats ..." counter. The "usmUser ..." variables will be added with the enhancement of additional users in later firmware versions. The system has only one context. The system accepts the context "normal" or an empty context.


### Authentication

The algorithms "HMAC-MD5-96" and "HMAC-SHA-96" are available for authentication. In addition, the "HMAC-SHA-2" variants (RFC7630) "SHA-256", "SHA-384" and "SHA-512" are implemented.

 "SHA-384" and "SHA512" are calculated purely in software. If "SHA-384" or "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

### Encryption

The methods "DES", "3DES", "AES-128", "AES-192" and "AES-256" are supported in combination with "HMAC-MD5-96" and "HMAC-SHA-96." For the "HMAC-SHA-2" protocols, there is currently neither RFC nor draft that will allow for cooperation with an encryption.

 While in the settings "AES-192" and "AES256" the key calculation is based on "draft-blumenthalphoto-aes-usm-04", the methods "AES 192-3DESKey" and "AES 256-3DESKey" utilize a key generation, which is also used in the "3DES" configuration ("draft-reeder-snmpv3-usm-3desede-00"). If one is not an SNMP expert, it is recommended to try in each case the settings with and without "...- 3DESKey".

### Passwords

The passwords for authentication and encryption are stored only as computed hashes for security reasons. Thus it is, if at all, very difficult to infer the initial password. However, the hash calculation changes with the set algorithms. If the authentication or privacy algorithms are changed, the passwords must be re-entered in the configuration dialog.

### Security


The following aspects should be considered:

- If encryption or authentication is used, then SNMP v1 and v2c should be turned off.

Otherwise the device could be accessed with it.

- If only authentication is used, then the new "HMAC-SHA-2" methods are superior to the MD5 or SHA-1 hashing algorithms. Since only SHA-256 is accelerated in hardware, and SHA-384 and SHA-512 are calculated purely in software, one should normally select SHA-256. From a cryptographic point of view, the security of SHA-256 is sufficient for today's usage.
- For SHA-1, there are a little less attack scenarios than MD5. If in doubt, SHA-1 is preferable.
- Encryption "DES" is considered very unsafe, use only in an emergency for reasons of compatibility!
- For cryptologists it's a debatable point whether "HMAC-MD5-96" and "HMAC-SHA-96" can muster enough entropy for key lengths of "AES-192" or "AES-256".
- From the foregoing considerations, we would recommend at present "HMAC-SHA-96" with "AES-128" as authentication and encryption method.

## Change in Trap Design

 In older MIB tables, a separate trap was defined for each combination of an event and a port number. This results in longer lists of trap definitions for the devices. For example, from **epc8221SwitchEvtPort1** to **epc8221SwitchEvtPort12**. Since new firmware versions can generate many more different events, this behavior quickly produces several hundred trap definitions. To limit this overabundance of trap definitions, the trap design has been changed to create only one specific trap for each event type. The port or sensor number is now available in the trap as an index OID within the variable bindings.

In order to recognize this change directly, the "Notification" area in the MIB table has been moved from sysObjectID.0 to sysObjectID.3. This way, unidentified events are generated until the new MIB table is imported. For compatibility reasons, SNMP v1 traps are created in the same way as before.

## NET-SNMP

NET-SNMP provides a very widespread collection of SNMP command-line tools (snmpget, snmpset, snmpwalk etc.) NET-SNMP is among others available for Linux and Windows. After installing NET-SNMP you should create the device-specific MIB of the device in NET-SMP share directory, e.g. after

```
c:\usr\share\snmp\mibs
```

or


```
/usr/share/snmp/mibs
```

So later you can use the 'subtree names' instead of OIDs:

```
Name: snmpwalk -v2c -mALL -c public 192.168.1.232 gudeads
```

```
OID: snmpwalk -v2c -mALL -c public 192.168.1.232 1.3.6.1.4.1.28507
```

## NET-SNMP Examples

 These examples refer to Gude devices that have switchable ports.

Query Power Port 1 switching state:

# Specifications

snmpget -v2c -mALL -c public 192.168.1.232 epc822XPortState.1

Switch on Power Port 1:

snmpset -v2c -mALL -c private 192.168.1.232 epc822XPortState.1 integer 1

## 4.6.1 Device MIB 8340

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.54.1.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	Description	OID	Type	Acc.
pdu8340TrapCtrl	0 = off 1 = Ver. 1 2 = Ver. 2c 3 = Ver. 3	.54.1.1.1.1.0	Integer32	RW
pdu8340TrapIIndex	A unique value, greater than zero, for each receiver slot.	.54.1.1.1.2.1.1.x	Integer32	RO
pdu8340TrapAddr	DNS name or IP address specifying one Trap receiver slot. A port can optionally be specified: 'name:port' An empty string disables this slot.	.54.1.1.1.2.1.2.x	OCTETS	RW
pdu8340Buzzer	turn Buzzer on and off	.54.1.3.10.0	Integer32	RW
pdu8340ActivePowerChan	Number of supported Power Channels.	.54.1.5.1.1.0	Unsigned32	RO
pdu8340PowerIndex	Index of Power Channel entries	.54.1.5.1.2.1.1.x	Integer32	RO
pdu8340ChanStatus	0 = data not active, 1 = data valid	.54.1.5.1.2.1.2.x	Integer32	RO
pdu8340AbsEnergyActive	Absolute Active Energy counter.	.54.1.5.1.2.1.3.x	Unsigned32	RO
pdu8340PowerActive	Active Power	.54.1.5.1.2.1.4.x	Integer32	RO
pdu8340Current	Actual Current on Power Channel.	.54.1.5.1.2.1.5.x	Unsigned32	RO
pdu8340Voltage	Actual Voltage on Power Channel	.54.1.5.1.2.1.6.x	Unsigned32	RO
pdu8340Frequency	Frequency of Power Channel	.54.1.5.1.2.1.7.x	Unsigned32	RO
pdu8340PowerFactor	Power Factor of Channel between -1.0 and 1.00	.54.1.5.1.2.1.8.x	Integer32	RO
pdu8340Pangle	Phase Angle between Voltage and L Line Current between -180.0 and 180.0	.54.1.5.1.2.1.9.x	Integer32	RO
pdu8340PowerApparent	L Line Mean Apparent Power	.54.1.5.1.2.1.10.x	Integer32	RO
pdu8340PowerReactive	L Line Mean Reactive Power	.54.1.5.1.2.1.11.x	Integer32	RO
pdu8340AbsEnergyReactive	Absolute Reactive Energy counter.	.54.1.5.1.2.1.12.x	Unsigned32	RO
pdu8340AbsEnergyActiveResettable	Resettable Absolute Active Energy counter. Writing '0' resets all resettable counter.	.54.1.5.1.2.1.13.x	Unsigned32	RW

# Specifications

pdu8340AbsEnergyReactiveResettable	.54.1.5.1.2.1.14.x	Unsigned32	RO	Resettable Absolute Reactive Energy counter.
pdu8340ResetTime	.54.1.5.1.2.1.15.x	Unsigned32	RO	Time in seconds since last Energy Counter reset.
pdu8340ForwEnergyActive	.54.1.5.1.2.1.16.x	Unsigned32	RO	Forward Active Energy counter.
pdu8340ForwEnergyReactive	.54.1.5.1.2.1.17.x	Unsigned32	RO	Forward Reactive Energy counter.
pdu8340ForwEnergyActiveResettable	.54.1.5.1.2.1.18.x	Unsigned32	RO	Resettable Forward Active Energy counter.
pdu8340ForwEnergyReactiveResettable	.54.1.5.1.2.1.19.x	Unsigned32	RO	Resettable Forward Reactive Energy counter.
pdu8340RevEnergyActive	.54.1.5.1.2.1.20.x	Unsigned32	RO	Reverse Active Energy counter.
pdu8340RevEnergyReactive	.54.1.5.1.2.1.21.x	Unsigned32	RO	Reverse Reactive Energy counter.
pdu8340RevEnergyActiveResettable	.54.1.5.1.2.1.22.x	Unsigned32	RO	Resettable Reverse Active Energy counter.
pdu8340RevEnergyReactiveResettable	.54.1.5.1.2.1.23.x	Unsigned32	RO	Resettable Reverse Reactive Energy counter.
pdu8340ResidualCurrent	.54.1.5.1.2.1.24.x	Unsigned32	RO	Actual Residual Current on Power Channel. According Typ A IEC 60755. Only visible on models that support this feature.
pdu8340LineSensorName	.54.1.5.1.2.1.100.x	OCTETS	RW	A textual string containing name of a Line Sensor
epc8340NTPTimeValid	.54.1.5.15.1.0	INTEGER	RO	Show if valid Time is received
epc8340NTPUnixTime	.54.1.5.15.2.0	Unsigned32	RO	show received NTP time as unixtime (secs since 1 January 1970)
epc8340NTPLastValidTimestamp	.54.1.5.15.3.0	Unsigned32	RO	show seconds since last valid NTP timestamp received
pdu8340SensorIndex	.54.1.6.1.1.1.x	Integer32	RO	None
pdu8340TempSensor	.54.1.6.1.1.2.x	Integer32	RO	actual temperature
pdu8340HygroSensor	.54.1.6.1.1.3.x	Integer32	RO	actual humidity
pdu8340InputSensor	.54.1.6.1.1.4.x	INTEGER	RO	logical state of input sensor
pdu8340AirPressure	.54.1.6.1.1.5.x	Integer32	RO	actual air pressure
pdu8340DewPoint	.54.1.6.1.1.6.x	Integer32	RO	dew point for actual temperature and humidity
pdu8340DewPointDiff	.54.1.6.1.1.7.x	Integer32	RO	difference between dew point and actual temperature (Temp - Dew Point)
pdu8340ExtSensorName	.54.1.6.1.1.32.x	OCTETS	RW	A textual string containing name of a external Sensor

## 4.6.2 Device MIB 8341

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.65.1.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a

# Specifications

value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	Description	OID	Type	Acc.
pdu8341TrapCtrl	0 = off 1 = Ver. 1 2 = Ver. 2 3 = Ver. 3	.65.1.1.1.1.0	Integer32	RW
pdu8341TrapIndex	A unique value, greater than zero, for each receiver slot.	.65.1.1.1.2.1.1.x	Integer32	RO
pdu8341TrapAddr	DNS name or IP address specifying one Trap receiver slot. A port can optionally be specified: 'name:port' An empty string disables this slot.	.65.1.1.1.2.1.2.x	OCTETS	RW
pdu8341Buzzer	turn Buzzer on and off	.65.1.3.10.0	Integer32	RW
pdu8341ActivePowerChan	Number of supported Power Channels.	.65.1.5.1.1.0	Unsigned32	RO
pdu8341PowerIndex	Index of Power Channel entries	.65.1.5.1.2.1.1.x	Integer32	RO
pdu8341ChanStatus	0 = data not active, 1 = data valid	.65.1.5.1.2.1.2.x	Integer32	RO
pdu8341AbsEnergyActive	Absolute Active Energy counter.	.65.1.5.1.2.1.3.x	Unsigned32	RO
pdu8341PowerActive	Active Power	.65.1.5.1.2.1.4.x	Integer32	RO
pdu8341Current	Actual Current on Power Channel.	.65.1.5.1.2.1.5.x	Unsigned32	RO
pdu8341Voltage	Actual Voltage on Power Channel	.65.1.5.1.2.1.6.x	Unsigned32	RO
pdu8341Frequency	Frequency of Power Channel	.65.1.5.1.2.1.7.x	Unsigned32	RO
pdu8341PowerFactor	Power Factor of Channel between -1.0 and 1.00	.65.1.5.1.2.1.8.x	Integer32	RO
pdu8341Pangle	Phase Angle between Voltage and L Line Current between -180.0 and 180.0	.65.1.5.1.2.1.9.x	Integer32	RO
pdu8341PowerApparent	L Line Mean Apparent Power	.65.1.5.1.2.1.10.x	Integer32	RO
pdu8341PowerReactive	L Line Mean Reactive Power	.65.1.5.1.2.1.11.x	Integer32	RO
pdu8341AbsEnergyReactive	Absolute Reactive Energy counter.	.65.1.5.1.2.1.12.x	Unsigned32	RO
pdu8341AbsEnergyActiveResettable	Resettable Absolute Active Energy counter. Writing '0' resets all resettable counter.	.65.1.5.1.2.1.13.x	Unsigned32	RW
pdu8341AbsEnergyReactiveResettable	Resettable Absolute Reactive Energy counter.	.65.1.5.1.2.1.14.x	Unsigned32	RO
pdu8341ResetTime	Time in seconds since last Energy Counter reset.	.65.1.5.1.2.1.15.x	Unsigned32	RO
pdu8341ForwEnergyActive	Forward Active Energy counter.	.65.1.5.1.2.1.16.x	Unsigned32	RO
pdu8341ForwEnergyReactive	Forward Reactive Energy counter.	.65.1.5.1.2.1.17.x	Unsigned32	RO
pdu8341ForwEnergyActiveResettable	Resettable Forward Active Energy counter.	.65.1.5.1.2.1.18.x	Unsigned32	RO
pdu8341ForwEnergyReactiveResettable	Resettable Forward Reactive Energy counter.	.65.1.5.1.2.1.19.x	Unsigned32	RO
pdu8341RevEnergyActive	Reverse Active Energy counter.	.65.1.5.1.2.1.20.x	Unsigned32	RO
pdu8341RevEnergyReactive		.65.1.5.1.2.1.21.x	Unsigned32	RO

	Reverse Reactive Energy counter.			
pdu8341RevEnergyActiveResettable		.65.1.5.1.2.1.22.x	Unsigned32	RO
	Resettable Reverse Active Energy counter.			
pdu8341RevEnergyReactiveResettable		.65.1.5.1.2.1.23.x	Unsigned32	RO
	Resettable Reverse Reactive Energy counter.			
pdu8341ResidualCurrent		.65.1.5.1.2.1.24.x	Unsigned32	RO
	Actual Residual Current on Power Channel. According Typ A IEC 60755. Only visible on models that support this feature.			
pdu8341LineSensorName		.65.1.5.1.2.1.100.x	OCTETS	RW
	A textual string containing name of a Line Sensor			
epc8341NTPTimeValid		.65.1.5.15.1.0	INTEGER	RO
	Show if valid Time is received			
epc8341NTPUnixTime		.65.1.5.15.2.0	Unsigned32	RO
	show received NTP time as unixtime (secs since 1 January 1970)			
epc8341NTPLastValidTimestamp		.65.1.5.15.3.0	Unsigned32	RO
	show seconds since last valid NTP timestamp received			
pdu8341SensorIndex		.65.1.6.1.1.1.x	Integer32	RO
	None			
pdu8341TempSensor		.65.1.6.1.1.2.x	Integer32	RO
	actual temperature			
pdu8341HygroSensor		.65.1.6.1.1.3.x	Integer32	RO
	actual humidity			
pdu8341InputSensor		.65.1.6.1.1.4.x	INTEGER	RO
	logical state of input sensor			
pdu8341AirPressure		.65.1.6.1.1.5.x	Integer32	RO
	actual air pressure			
pdu8341Dew Point		.65.1.6.1.1.6.x	Integer32	RO
	dew point for actual temperature and humidity			
pdu8341Dew PointDiff		.65.1.6.1.1.7.x	Integer32	RO
	difference between dew point and actual temperature (Temp - Dew Point)			
pdu8341ExtSensorName		.65.1.6.1.1.32.x	OCTETS	RW
	A textual string containing name of an external Sensor			

## 4.7 SSL

### TLS Standard

The device is compatible with TLS v1.1 to TLS v1.3 standards, but due to lack of security, SSL v3.0, TLS 1.0, and RC4, MD5, SHA1, and DES encryption are disabled. All ciphers use Diffie-Hellman key exchange (Perfect Forward Secrecy).

### Creating your own Certificates

The SSL stack is supplied with a specially newly generated self-signed certificate. There is no function to generate the local certificate anew at the touch of a button, since the required random numbers in an embedded device are usually not independent enough. However, you can create new certificates and import them to the device. The server accepts RSA (2048/4096) and ECC (Elliptic Curve Cryptography) certificates.

Usually OpenSSL is used to create an SSL certificate. For Windows for example, there is the light version of Shining Light Productions. There you open a command prompt, change to the directory "C:\OpenSSL-Win32\bin" and set these environment variables:

```
set openssl_conf=C:\OpenSSL-Win32\bin\openssl.cfg
```



```
set RANDFILE=C:\OpenSSL-Win32\bin\.rnd
```


Here are some examples for the generation with OpenSSL:

### Creation of a self-signed RSA 2048-bit certificate

```
openssl genrsa -out server.key 2048
openssl req -new -x509 -days 365 -key server.key -out server.crt
```

### RSA 2048-bit certificate with Sign Request:

```
openssl genrsa -out server.key 2048
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

 The server keys should be created with "openssl genrsa". The Gude device processes keys in the traditional PKCS#1 format. This can be recognized by the fact that the generated key file starts with "-----BEGIN RSA PRIVATE KEY-----". If the file starts with "-----BEGIN PRIVATE KEY-----", the file is in PKCS#8 format and the key is not recognized. If you have only a key in PKCS#8 format, you can convert it to PKCS#1 with openssl: "**openssl rsa -in pkcs8.key -out pkcs1.key**".

### ECC Certificate with Sign Request:

```
openssl ecparam -genkey -name prime256v1 -out server.key
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

If you have created your key and certificate, both files are concatenated to one file:


Linux:

```
cat server.crt server.key > server.pem
```


Windows:

```
copy server.crt + server.key server.pem
```

The created server.pem can only be uploaded in the maintenance section of the device.

 If several certificates (Intermediate CRT's) should also be uploaded to the device, one should make sure, that firstly the server certificate and secondly the Intermediates are assembled, e.g:

```
cat server.crt IM1.crt IM2.crt server.key > server.pem
```

 An uploaded certificate will be preserved, when a device is put back to factory defaults <sup>19</sup>.

## Performance Considerations


If RSA 4096 certificates are used, the first access to the web server can take 8-10 seconds, because the math unit of the embedded CPU is highly demanded. After that, the parameters are in the SSL session cache, so all other requests are just as fast as with other certificate lengths. For a quick response even on the first access, we recommend RSA 2048-bit certificates that offer adequate security, too.

## 4.8 Console

For the configuration and control of the device, there is a set of commands with parameters that can be entered through a console. The console is available via SSH or Telnet, or for devices with RS232 port through using a serial terminal. It is not necessary to use Telnet, in **Raw Mode** a simple TCP/IP connection is sufficient to send commands. The communication can also be performed automated (e.g. via scripting languages). The console features are configured through the web interface<sup>26</sup>.

### Login

A ssh / telnet log in can be configured with password or without:

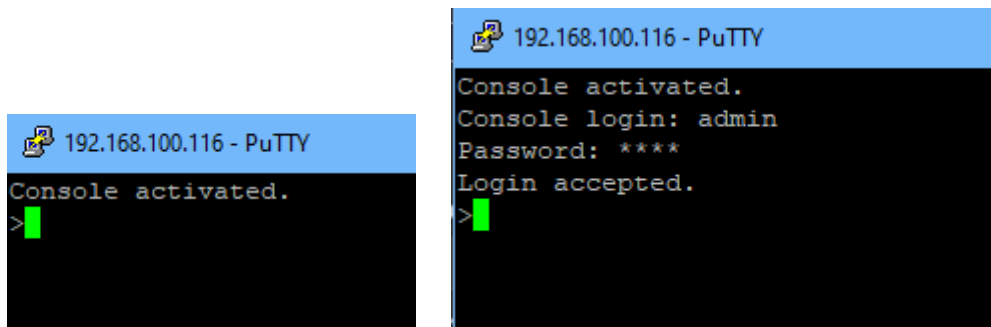

### Command Set

There are several command levels. The following commands are usable from each level:

back	go back one level
help	all commands of the actual level
help all	show all commands
logout	logout (only when login required)
quit	quit console

The "help" command returns all the commands of the current level. If "help" is called from the top level, e.g. the line "http [subtopics]" appears. This means that there is another level for "http". With the command "http help" all commands below "http" are shown. Alternatively, with entering "http" you can select the http level, and "help" shows all the commands on the selected level. The command "back" again selects the top level. It is possible to use "help" at any position: "http passwd help" provides all commands that have the prefix "http passwd".

You will find a complete list of all possible device commands in the chapter "Cmd Over-

view".

## Parameter

If parameters are expected for the command, the parameter may be passed as numeric or constant. If e.g. you get the following line as help:

```
http server set {http_both=0|https_only=1|http_only=2}
```

the following instruction pairs are equivalent:

```
http server set https_only
http server set 1
```

or

```
http server set https_both
http server set 0
```

Numerical parameters can be entered with different bases. Here is an example of the decimal value 11:

Base	Input
decimal (10)	11
hexadecimal (16)	0xb
octal (8)	013
binary (2)	0b1011

## Bit Field Parameter

Some parameters can take several values at the same time. In the following example, all values between 0 and 5 can be set. In the help, this can be recognized by the fact that the values are not separated by the "|" character, but by commas.

```
"{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}"
```

To set EVT\_SYSLOG and EVT\_EMAIL in a command, you can use the following syntax:

```
>extsensor 1 2 0 events type set "EVT_SYSLOG,EVT_EMAIL"
OK.
```

or numeric

```
>extsensor 1 2 0 events type set "0,2"
OK.
```

Additionally you can set all values with "ALLSET" or encode any bit pattern as hexadecimal with a syntax like "#7f1a".

## Return Values

If a command is unknown or a parameter is incorrect, the output "ERR." is given at the

beginning of the line, followed by a description of the fault. Successful instructions without special return value will be acknowledged by "OK.". All other return values are output within a single line. There are of two exceptions:

1. Some configuration changes, that affect TCP / IP and UDP, need a restart to be applied. These parameters are output on two lines. In the first line the current value is shown, on the second row the value after a restart. In the "Cmd Overview" table this is marked with "Note 2".
2. Other configurations (such as the assigned IPv6 addresses) have several values that can change dynamically. This is marked with "Note 3" in the "Cmd Overview" table.

## Numerical Returns

For parameters that support constants, these constants are output as return values. To better deal with scripting languages, it may be easier to work only with numerical returns. The command `vt100 numeric set ON` enables that only numerical values appear.

## Comments


If you use a tool to send an entire file of commands via Telnet, it is helpful, if you can place comments in there. Beginning with the comment character "#", the remaining contents of a line is ignored.

## Telnet

If the configuration "Raw Mode" is turned off, it is tried to negotiate the Telnet configuration between client and server using IAC commands. If this fails, the editing functions are not active, and the "Activate echo" option determines whether the characters sent to the Telnet server will be returned. Normally the client begins with the IAC negotiation. If this is not the case with the client, the device configuration "Active negotiation" should be turned on.

## Raw Mode

If you want to use the console only automated, it may be advantageous to set the configuration "Raw mode" to "yes" and "Activate echo" to "no" to. Then there is no interfering interaction with the editor functions and there is no need to filter the sent characters to process the return values.


 If in the console "Raw mode" is activated but not in the used Telnet client, the IAC commands sent at the beginning can appear as interfering characters in the command line (partially invisible).

## Editing

The following edit functions are available when the terminal supports VT100, and Raw Mode is deactivated. Entered characters are inserted at the cursor position.

Keys	Function
------	----------

Left, Right	moves cursor left or right
Pos1, End	moves cursor to the beginning or end of line
Del	deletes character under the cursor
Backspace	deletes character left of cursor
Up, Down	shows input lines history
Tab, Ctrl-Tab	completes the word at cursor
Ctrl-C	clears the line

 This chapter is general for all Gude devices. Depending on the device type, ports or certain sensors may not be available.

## Sensor Examples

### a) External Sensors

```
>extsensor all show
E=1,L="7106",0="21.3°C",1="35.1%",3="1013hPa",4="5.2°C",5="16.0°C"
E=2,L="7102",0="21.2°C",1="35.4%",4="5.3°C",5="15.9°C"
```

The command lists one connected external sensor per line, and the individual measured values are separated by commas after the label name. The digit before the equal sign corresponds to the Index field in the External Sensor Table.

```
>extsensor 1 0 value show
```

Displays temperature of the sensor at Port 1


### b) Line Sensors

```
>linesensor all "0,1,2,3,12" show
L=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
L=2,L="Power Port",0="13000Wh",1="0W",2="223V",3="0A",12="996199s"
```

This command outputs all line sensor values in one line. A list of all fields (according to the energy sensor table) is transferred as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>linesensor 1 "0,1,2,3,12" show
>linesensor 1 1 show
```

These variants give the sensor values of the field list or of a sensor at Line-In 1.

 For devices with Overvoltage Protection, the "linesensor all" command also outputs the state of the protection ("OVP=x"). A "1" means ok, a "0" a failure of the protection.

### c) Port Sensors

```
>portsensor all "0,1,2,3,12" show
P=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
P=2,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="996199s"
...
P=12,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
```

This command outputs all port sensor values in one line. A list of all fields (according to the energy sensor table) is passed as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>portsensor 2 "0,1,2,3,12" show
>portsensor 2 1 show
```

These variants give the sensor values of the field list or a sensor to at Outlet Port 2.



The following examples refer to Gude devices that have switchable ports.

## d) Displaying Port Relays

```
>port all state 1 show
P1=ON, P2=OFF, P3=ON, P4=OFF, P5=OFF, P6=OFF, P7=OFF, P8=ON
```

The command "port all state {MODE0=0|MODE1=1|MODE2=2} show" returns the switching state of all relays in 3 possible formats.

## e) Switching Port Relays

```
#port all state set "1,2,12" 1
OK.
```

The command syntax "port all state set "{port\_list}" {OFF=0|ON=1}" sets a list of ports to ON=1 or OFF=0.

## 4.8.1 SSH

The device supports SSH-2 connections with either public key authentication or user name and password. The "login" must be enabled for SSH. Users and passwords can be stored locally or retrieved via a radius server. If you want to use SSH in a terminal, [Activate echo](#) should be enabled.

### Public Keys

The following public keys are accepted:

Key type	Length
RSA	2048, 4096
ECDSA	256, 384

### Generation with PuTTYgen

# Specifications

Key

Public key for pasting into OpenSSH authorized\_keys file:

```
ssh-rsa AAAAB3NzaC1yc2EAAAABJQAAAQEAKA926b1dwfApsq1ra3Hzw
+L5mdXuqglDgQ1Db7Klm16mqmzGoVBX6kmVWmx2XRucTUQohrVzvqAUj
+38VtDLcTIXbtZS7i7WrqDdougl28k5Jx7JORpMuNGBLOsdPK5KNeYm9SPo8wltN0
pc04U3r9unNjqTar2cXqui4XHdvvFr0dByaaeR3yBWjivdv46uuXaia2T4p6Ou4Pkys0/b
/AnBVSw2SeRNIVoEAUx8eXrIRkVhrXZtzGaxK2xDE3l9Ziz//xt79o6V7yih00ROuf1bit
```

Key fingerprint:

Key comment:

Key passphrase:

Confirm passphrase:

Actions

Generate a public/private key pair

Load an existing private key file

Save the generated key

Generated keys can be copied directly from e.g. PuTTYgen,

Upload new SSH public key: 

```
ssh-rsa
AAAAB3NzaC1yc2EAAA
ADAQABAAABAQDTliqb/
```

Delete public key

and inserted into the Configuration - Console input field. Public keys are accepted in SSH2 or OpenSSH format.

## Generation with ssh-keygen

The tool ssh-keygen is mostly shipped with Linux and Windows to generate SSH keys. Here is an example to generate an ECDSA 384 key.

```
ssh-keygen -t ecdsa -b 384 -f ssh.key
```

In the file ssh.pub is then the private key, the content of ssh.key.pub is inserted into the field "Upload SSH public key:".

Upload new SSH public key: 

```
ecdsa-sha2-nistp384
AAAAE2VjZHNhLXNoYTl
tbmlzdHAzODQAAAAIbm
```

Delete public key

### 4.8.2 Cmd 8340 / 8341

Command	Description	Note
---------	-------------	------

# Specifications

logout	go to login prompt w hen enabled	2
quit	quits telnet session - nothing in serial console	2
back	back one cmd level	2
help	show all cmds from this level	2
help all	show all cmds	2
clock	enters cmd group "clock"	
clock ntp enabled set {OFF=0 ON=1}	enables ntp	
clock ntp enabled show	show s if ntp enabled	
clock timezone set {minutes}	sets timezone	
clock timezone show	show s timezone	
clock dst enabled set {OFF=0 ON=1}	enables dst	
clock dst enabled show	show s if dst is enabled	
clock manual set "{hh:mm:ss yyyy-mm-dd}"	sets time and date manually	
clock show	show s actual time and date	
clock ntp server {PRIMARY=0 BACKUP=1} set "{dns_name}"	sets ntp server name	
clock ntp server {PRIMARY=0 BACKUP=1} show	show s ntp server name	
console	enters cmd group "console"	
console version	show s unique console version number	
console telnet enabled set {OFF=0 ON=1}	enables telnet on/off	
console telnet enabled show	show s if telnet enabled	
console telnet port set {ip_port}	sets telnet port	
console telnet port show	show s telnet port	
console telnet raw set {OFF=0 ON=1}	sets raw mode (disables editing) on/off	
console telnet raw show	show s if raw mode enabled	
console telnet echo set {OFF=0 ON=1}	enables echo on/off	
console telnet echo show	show s if echo enabled	
console telnet activeneg set {OFF=0 ON=1}	enables telnet active negotiation (IAC) on/off	
console telnet activeneg show	show s if active negotiation enabled	
console telnet login set {OFF=0 ON=1}	enables login on/off	
console telnet login show	show s if login enabled	
console telnet login local set {OFF=0 ON=1}	enables local login on/off	
console telnet login local show	show s if local login enabled	
console telnet login radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
console telnet login radius show	show s if RADIUS login enabled	
console telnet login delay set {OFF=0 ON=1}	enables delay (after 3 login fails) on/off	
console telnet login delay show	show s if login delay enabled	
console telnet pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console telnet pushmsgs config show	show s if persistent push msgs are enabled	
console telnet pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console telnet pushmsgs show	show s if temporary push msgs are enabled	
console telnet user set "{username}"	sets login user name	
console telnet user show	show s login user name	
console telnet passw d set "{passw d}"	sets login passw ord	
console telnet passw d hash set "{passw d}"	sets login hashed passw ord	
console ssh enabled set {OFF=0 ON=1}	enables SSH	
console ssh enabled show	show s if SSH enabled	
console ssh port set {ip_port}	sets SSH port	
console ssh port show	show s SSH port	
console ssh echo set {OFF=0 ON=1}	enables echo on/off	
console ssh echo show	show s if echo enabled	
console ssh pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console ssh pushmsgs config show	show s if persistent push msgs are enabled	
console ssh pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console ssh pushmsgs show	show s if temporary push msgs are enabled	
console ssh public hash set "{passw d}"	sets hash of SSH public key	
console ssh public hash show	show s hash of SSH public key	
email	enters cmd group "email"	
email enabled set {OFF=0 ON=1}	enables email on/off	
email enabled show	show s if email is enabled	
email sender set "{email_addr}"	sets email sender address	



# Specifications

email sender show	show s email sender address	
email recipient set "{email_addr}"	sets email recipient address	
email recipient show	show s email recipient address	
email server set "{dns_name}"	sets email SMTP server address	
email server show	show s email SMTP server address	
email port set {ip_port}	sets email SMTP port	
email port show	show s email SMTP port	
email security set {NONE=0 STARTTLS=1 SSL=2}	sets SMTP connection security	
email security show	show s SMTP connection security	
email auth set {NONE=0 PLAIN=1 LOGIN=2}	sets email authentication	
email auth show	show email authentication	
email user set "{username}"	sets SMTP username	
email user show	show s SMTP username	
email passw d set "{passw d}"	sets SMTP passw ord	
email passw d hash set "{passw d}"	sets crypted SMTP passw ord	
email testmail	send test email	
ethernet	enters cmd group "ethernet"	
ethernet mac show	show s MAC address	
ethernet link show	show s ethernet link state	
ethernet phyprefer set {10MBIT_HD=0 10MBIT_FD=1 100MBIT_HD=2 100MBIT_FD=3}	sets preferred speed for PHY Auto Negotiation	
ethernet phyprefer show	show s preferred speed for PHY Auto Negotiation	
extsensor	enters cmd group "extsensor"	
extsensor all show	show s all values from connected external sensors	
extsensor all show	show s all plugged sensors and fields	
extsensor {port_num} {sen_field} value show	show s sensor value	6
extsensor {port_num} {sen_type} label set "{name}"	sets sensor name to label	6
extsensor {port_num} {sen_type} label show	show s label of sensor	6
extsensor {port_num} type show	show s type of sensor	
extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1}	enables sensor events on/off	6
extsensor {port_num} {sen_type} {sen_field} events show	show s if sensor events are enabled	6
extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8}"	enables different event types	6
extsensor {port_num} {sen_type} {sen_field} events type show	show s what event types are enabled	6
extsensor {port_num} {sen_type} {sen_field} events beeper mode set {CONTINUOUS=0 INTERMITTENT=1}	sets beeper tone	
extsensor {port_num} {sen_type} {sen_field} events beeper mode show	show s beeper tone	
extsensor {port_num} {sen_type} {sen_field} maxval set {num}	sets maximum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} maxval show	show s maximum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} minval set {num}	sets minimum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} minval show	show s minimum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} hyst set {num}	sets hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field} hyst show	show s hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	

# Specifications

extsensor {port_num} {sen_type} {sen_field} publish mode show	show s publish mode	
extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
extsensor {port_num} {sen_type} {sen_field} publish mqtt retain show	show s if mqtt retain set	
extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs}	sets publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish timer show	show s publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish delta set {float}	sets publish delta value	
extsensor {port_num} {sen_type} {sen_field} publish delta show	show s publish delta value	
extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4}	sets sensor Min/Max measurement period	
extsensor period show	show s sensor Min/Max measurement period	
extsensor beeper set {OFF=0 ON=1}	enables beeper sensor alarms	
extsensor beeper show	show s if beeper sensor alarms are enabled	
http	enters cmd group "http"	
http server set {HTTP_BOTH=0 HTTPS_ONLY=1 HTTP_ONLY=2 HTTPS_REDIR=3}	sets accepted connection types	
http server show	show s accepted connection types	
http port set {ip_port}	sets http port	
http port show	show s http port	
http portssl set {ip_port}	sets https port	
http portssl show	show s https port	
http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3}	restricts TLS mode	
http tls mode show	show s TLS mode restriction	
http ajax enabled set {OFF=0 ON=1}	enables ajax autorefresh on/off	
http ajax enabled show	show s if ajax autorefresh enabled	
http passwd enabled set {OFF=0 ON=1}	enables http passwd on/off	
http passwd enabled show	show s if http passwd enabled	
http passwd local set {OFF=0 ON=1}	enables local login on/off	
http passwd local show	show s if local login enabled	
http passwd radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
http passwd radius show	show s if RADIUS login enabled	
http passwd user set "{passwd}"	sets http user passwd	
http passwd admin set "{passwd}"	sets http admin passwd	
http passwd hash user set "{passwd}"	sets hashed http user passwd	
http passwd hash admin set "{passwd}"	sets hashed http admin passwd	
ip4	enters cmd group "ip4"	
ip4 hostname set "{name}"	sets device hostname	
ip4 hostname show	show s device hostname	3
ip4 address set "{ip_address}"	sets IPv4 address	
ip4 address show	show s IPv4 address	3
ip4 netmask set "{ip_address}"	sets IPv4 netmask	
ip4 netmask show	show s IPv4 netmask	3
ip4 gateway set "{ip_address}"	sets IPv4 gateway address	
ip4 gateway show	show s IPv4 gateway address	3
ip4 dns set "{ip_address}"	sets IPv4 DNS server address	
ip4 dns show	show s IPv4 DNS server address	3
ip4 dhcp enabled set {OFF=0 ON=1}	enables IPv4 DHCP on/off	
ip4 dhcp enabled show	show s IPv4 DHCP state	3
ip6	enters cmd group "ip6"	
ip6 enabled set {OFF=0 ON=1}	enables IPv6 on/off	
ip6 enabled show	show s if IPv6 is enabled	3
ip6 routadv enabled set {OFF=0 ON=1}	enables IPv6 router advertisement	
ip6 routadv enabled show	show s IPv6 router advertisement state	3
ip6 dhcp enabled set {OFF=0 ON=1}	enables IPv6 DHCP on/off	
ip6 dhcp enabled show	show s if IPv6 DHCP is enabled	3

# Specifications

ip6 address show	show all IPv6 addresses	4
ip6 gateway show	show all IPv6 gateways	4
ip6 dns show	show all IPv6 DNS server	4
ip6 manual enabled set {OFF=0 ON=1}	enables manual IPv6 addresses	
ip6 manual enabled show	shows if manual IPv6 addresses are enabled	3
ip6 manual address {1..4} set "{ip_address}"	sets manual IPv6 address	
ip6 manual address {1..4} show	shows manual IPv6 address	3
ip6 manual gateway set "{ip_address}"	sets manual IPv6 gateway address	
ip6 manual gateway show	shows manual IPv6 gateway address	3
ip6 manual dns {1..2} set "{ip_address}"	sets manual IPv6 DNS server address	
ip6 manual dns {1..2} show	shows manual IPv6 DNS server address	3
ipacl	enters cmd group "ipacl"	
ipacl ping enabled set {OFF=0 ON=1}	enables ICMP ping on/off	
ipacl ping enabled show	shows if ICMP ping enabled	
ipacl enabled set {OFF=0 ON=1}	enable IP filter on/off	
ipacl enabled show	shows if IP filter enabled	
ipacl filter {ipacl_num} set "{dns_name}"	sets IP filter {ipacl_num}	
ipacl filter {ipacl_num} show	shows IP filter {ipacl_num}	
linesensor	enters cmd group "linesensor"	
linesensor all {field_list} show	shows energy sensors according field list of all line sensors	5
linesensor {line_num} {field_list} show	shows energy sensors according field list of one line sensor	5
linesensor {line_num} {energy_sensor} value show	shows energy sensor of given line	5
linesensor {line_num} ovp show	show state of Overvoltage Protection	
linesensor {line_num} counter reset	resets energy metering counter	
linesensor {line_num} label set "{name}"	sets line meter to label	
linesensor {line_num} label show	shows label of line meter	
linesensor {line_num} {energy_sensor} events set {OFF=0 ON=1}	enables events on/off	
linesensor {line_num} {energy_sensor} events show	shows if events are enabled	
linesensor {line_num} {energy_sensor} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}"	enables different event types	
linesensor {line_num} {energy_sensor} events type show	shows what event types are enabled	
linesensor {line_num} {energy_sensor} events beeper mode set {CONTINUOUS=0 INTERMITTENT=1}	sets beeper tone	
linesensor {line_num} {energy_sensor} events beeper mode show	shows beeper tone	
linesensor {line_num} {energy_sensor} maxval set {float}	sets maximum value for line meter	
linesensor {line_num} {energy_sensor} maxval show	shows maximum value for line meter	
linesensor {line_num} {energy_sensor} minval set {float}	sets minimum value for line meter	
linesensor {line_num} {energy_sensor} minval show	shows minimum value for line meter	
linesensor {line_num} {energy_sensor} hyst set {float}	sets hysteresis value for line meter	
linesensor {line_num} {energy_sensor} hyst show	shows hysteresis value for line meter	
linesensor {line_num} {energy_sensor} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
linesensor {line_num} {energy_sensor} publish mode show	shows publish mode	
linesensor {line_num} {energy_sensor} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	

# Specifications

linesensor {line_num} {energy_sensor} publish mqtt retain show	show s if mqtt retain set	
linesensor {line_num} {energy_sensor} publish timer set {num_secs}	sets publish time interval	
linesensor {line_num} {energy_sensor} publish timer show	show s publish time interval	
linesensor {line_num} {energy_sensor} publish delta set {float}	sets publish delta value	
linesensor {line_num} {energy_sensor} publish delta show	show s publish delta value	
linesensor {line_num} events set {OFF=0 ON=1}	LEGACY - enables events on/off	L
linesensor {line_num} events show	LEGACY - show s if events are enabled	L
linesensor {line_num} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8}"	LEGACY - enables different event types	L
linesensor {line_num} events type show	LEGACY - show s what event types are enabled	L
linesensor {line_num} maxval set {float}	LEGACY - sets maximum value for line meter	L
linesensor {line_num} maxval show	LEGACY - show s maximum value for line meter	L
linesensor {line_num} minval set {float}	LEGACY - sets minimum value for line meter	L
linesensor {line_num} minval show	LEGACY - show s minimum value for line meter	L
linesensor {line_num} hyst set {float}	LEGACY - sets hysteresis value for line meter	L
linesensor {line_num} hyst show	LEGACY - show s hysteresis value for line meter	L
linesensor beeper set {OFF=0 ON=1}	enables beeper for line meter alarms	
linesensor beeper show	show s if beeper for line meter alarms is enabled	
modbus	enters cmd group "modbus"	
modbus enabled set <off=0/on=1>	enables Modbus TCP support	
modbus enabled show	show s if Modbus is enabled	
modbus port set <ip_port>	sets Modbus TCP port	
modbus port show	show s Modbus TCP port	
mqtt	enters cmd group "mqtt"	
mqtt {broker_idx} enabled set {OFF=0 ON=1}	enable mqtt	
mqtt {broker_idx} enabled show	show s if mqtt enabled	
mqtt {broker_idx} server set "{dns_name}"	sets broker name	
mqtt {broker_idx} server show	show s broker name	
mqtt {broker_idx} tls enabled set {OFF=0 ON=1}	enable TLS	
mqtt {broker_idx} tls enabled show	show s if TLS enabled	
mqtt {broker_idx} port set {ip_port}	set broker TCP/IP port	
mqtt {broker_idx} port show	show s broker TCP/IP port	
mqtt {broker_idx} user set "{username}"	sets username	
mqtt {broker_idx} user show	show s username	
mqtt {broker_idx} passwd set "{passwd}"	sets password	
mqtt {broker_idx} passwd hash set "{passwd}"	sets hashed password	
mqtt {broker_idx} client set "{name}"	sets client name	
mqtt {broker_idx} client show	show s client name	
mqtt {broker_idx} qos set {QOS0=0 QOS1=1}	sets QoS level	
mqtt {broker_idx} qos show	show s QoS level	
mqtt {broker_idx} keepalive set {num_secs}	sets keep-alive time	
mqtt {broker_idx} keepalive show	show s keep-alive time	
mqtt {broker_idx} topic set "{name}"	sets topic prefix	
mqtt {broker_idx} topic show	show s topic prefix	
mqtt {broker_idx} console enabled set {OFF=0 ON=1}	permit console cmds	
mqtt {broker_idx} console enabled show	show s if console cmds allowed	
mqtt {broker_idx} device data timer set {num_secs}	sets telemetry interval	
mqtt {broker_idx} device data timer show	show s telemetry interval	
radius	enters cmd group "radius"	
radius {PRIMARY=0 SECONDARY=1} enabled set <off=0/on=1>	enables radius client	
radius {PRIMARY=0 SECONDARY=1} enabled show	show if radius client enabled	

# Specifications

radius {PRIMARY=0 SECONDARY=1} server set "<dns_name>"	sets radius server address	
radius {PRIMARY=0 SECONDARY=1} server show	show s radius server address	
radius {PRIMARY=0 SECONDARY=1} passw ord set "{passw d}"	sets radius server shared secret	
radius {PRIMARY=0 SECONDARY=1} passw ord hash set "{passw d}"	sets radius server crypted shared secret	
radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs}	sets server request timeout	
radius {PRIMARY=0 SECONDARY=1} auth timeout show	show s server request timeout	
radius {PRIMARY=0 SECONDARY=1} retries set {0..99}	sets server number of retries	
radius {PRIMARY=0 SECONDARY=1} retries show	show s server number of retries	
radius chap enabled set <off=0/on=1>	enables CHAP	
radius chap enabled show	show s if CHAP is enabled	
radius message auth set <off=0/on=1>	enables request message authentication	
radius message auth show	show s if request message authentication is enabled	
radius default timeout set {num_secs}	sets default session timeout (w hen not returned as Session-Timeout Attribute)	
radius default timeout show	show s default session timeout	
snmp	enters cmd group "snmp"	
snmp port set {ip_port}	sets SNMP UDP port	
snmp port show	show s SNMP UDP port	
snmp snmpget enabled set {OFF=0 ON=1}	enables SNMP GET cmds on/off	
snmp snmpget enabled show	show if SNMP GET cmds are enabled	
snmp snmpset enabled set {OFF=0 ON=1}	enables SNMP SET cmds on/off	
snmp snmpset enabled show	show if SNMP SET cmds are enabled	
snmp snmpv2 enabled set {OFF=0 ON=1}	enables SNMP v2 on/off	
snmp snmpv2 enabled show	show if SNMP v2 is enabled	
snmp snmpv2 public set "{text}"	enables SNMP v3 on/off	
snmp snmpv2 public show	show if SNMP v3 is enabled	
snmp snmpv2 private set "{text}"	sets SNMP v2 public community	
snmp snmpv2 private show	show s SNMP v2 public community	
snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}"	sets sysLocation/sysName/sysContact	
snmp system {CONTACT=0 NAME=1 LOCATION=2} show	gets sysLocation/sysName/sysContact	
snmp snmpv3 enabled set {OFF=0 ON=1}	sets SNMP v2 private community	
snmp snmpv3 enabled show	show s SNMP v2 private community	
snmp snmpv3 username set "{text}"	sets SNMP v3 username	
snmp snmpv3 username show	show s SNMP v3 username	
snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5}	sets SNMP v3 authentication	
snmp snmpv3 authalg show	show SNMP v3 authentication algorithm	
snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	sets SNMP v3 privacy algorithm	
snmp snmpv3 privalg show	show SNMP v3 privacy algorithm	
snmp snmpv3 authpassw d set "{passw d}"	sets SNMP v3 authentication passw ord	
snmp snmpv3 privpassw d set "{passw d}"	sets SNMP v3 privacy passw ord	
snmp snmpv3 authpassw d hash set "{passw d}"	sets SNMP v3 authentication hashed passw ord	
snmp snmpv3 privpassw d hash set "{passw d}"	sets SNMP v3 privacy hashed passw ord	
snmp trap type set {NONE=0 1=1 2=2 3=3}	sets type of SNMP traps	
snmp trap type show	show SNMP trap type	
snmp trap receiver {trap_num} set "{dns_name}"	sets address and port of SNMP trap receiver {trap_num}	
snmp trap receiver {trap_num} show	show address and port of SNMP trap receiver {trap_num}	
syslog	enters cmd group "syslog"	

# Specifications

syslog enabled set {OFF=0 ON=1}	enables syslog msgs on/off	
syslog enabled show	show if syslog enabled	
syslog server set "{dns_name}"	sets address of syslog server	
syslog server show	show s address of syslog server	
system	enters cmd group "system"	
system beeper manual set {OFF=0 ON=1} {millisec}	manually sets beeper w ith optional duration	
system beeper manual show	show s beeper state	
system restart	restarts device	
system fabsettings	restore fab settings and restart device	
system bootloader	enters bootloader mode	
system flushdns	flush DNS cache	
system uptime	number of seconds the device is running	
system name show	show s device name	
system version show	show s actual firmw are version	
system display {disp_num} default extsensor {port_num} {sen_type} set {sen_field}	show s external sensor	
system display {disp_num} default linesensor {line_num} set {sen_field}	show s energy line sensor	
system display {disp_num} default set {BLANK=0,LOCAL_TIME=1,UTC_TIME=2}	show s other contents	
system display {disp_num} default show	show s default setting for display	
system display default hash set "{data}"	sets hashed display setting	
system display default hash show	show s hashed display setting	
system panel enabled set {OFF=0 ON=1}	blocks panel buttons w hen not enabled	
system panel enabled show	show s if panel buttons are enabled	
system sensor {VSYS=0 VAUX=1 VMAIN=2 TCPU=3} show	show s internal sensors if model supports it	
timer	enters cmd group "timer"	
timer enabled set {OFF=0 ON=1}	enables timer functions	
timer enabled show	show s if timer a enabled	
timer syslog facility set {0..23}	sets facility level for timer syslog	
timer syslog facility show	show s facility level for timer syslog	
timer syslog verbose set {0..7}	sets verbose level for timer syslog	
timer syslog verbose show	show s verbose level for timer syslog	
timer {rule_num} enabled set {OFF=0 ON=1}	enables rule	
timer {rule_num} enabled show	show s if rule is enabled	
timer {rule_num} name set "{name}"	sets name of rule	
timer {rule_num} name show	show s name of rule	
timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy-mm-dd}"	sets date range of rule	
timer {rule_num} {FROM=0 UNTIL=1} show	show s date range of rule	
timer {rule_num} trigger jitter set {0..65535}	sets jitter for rule	
timer {rule_num} trigger jitter show	show jitter of rule	
timer {rule_num} trigger random set {0..100}	sets probability for rule	
timer {rule_num} trigger random show	show s rule probability	
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} set "{time_date_list}"	sets time date list	
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} show	show s time date list	
timer {rule_num} action mode set {SWITCH=1 CLI=2}	sets sw itch or cli cmd	
timer {rule_num} action mode show	show s if sw itch or cli cmd	
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} set "{port_list}"	sets port list for sw itch cmd	
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} show	show s port list for sw itch cmd	
timer {rule_num} action delay set {0..65535}	delay betw een cmds	
timer {rule_num} action delay show	show s delay betw een cmds	
timer {rule_num} action console set "{cmd}"	sets cmd string	
timer {rule_num} action console show	show s cmd string	
timer {rule_num} action hash set "{data}"	sets action binary form	
timer {rule_num} action hash show	show s action binary form	

timer {rule_num} delete	delete one timer	
timer delete all	delete all timer	
vt100	enters cmd group "vt100"	
vt100 echo set {OFF=0 ON=1}	sets console echo state	
vt100 echo show	show s console echo state	
vt100 numeric set {OFF=0 ON=1}	sets numeric mode	
vt100 numeric show	show s numeric mode state	
vt100 reset	resets terminal	

## Notes

1. Legacy - The command has been replaced by a newer version
2. Command can be entered on any level
3. The output may show 2 lines - the 1st line shows the actual state, the 2nd line the status after reboot
4. The output may show several lines
5. Please see the **Energy Sensor Table** for the right energy index
6. Please see the **External Type and External Sensor Field Tables** for the correct sensor index

## Energy Sensor Table "{energy\_sensor}"

Index	Description	Unit
0	Forward Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	A
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Forward Active Energy Resettable	Wh
10	Forward Reactive Energy	VARh
11	Forward Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	s
13	Reverse Active Energy	Wh
14	Reverse Reactive Energy	VARh
15	Reverse Active Energy Resettable	Wh
16	Reverse Reactive Energy Resettable	VARh
17	Absolute Active Energy	Wh
18	Absolute Reactive Energy	VARh
19	Absolute Active Energy Resettable	Wh
20	Absolute Reactive Energy Resettable	VARh
21	Residual Current	A



Dependent on the device model Residual Current may not be supported.

## External Sensor Type Table "{sen\_type}"

Constants "{7x01=0|7x04=0|7x02=1|7x05=1|7x06=2}"

Index	Description	Products
0	Temperature	7001, 7101, 7201
0	Temperature	7004, 7104, 7204
1	Temperature, Humidity	7002, 7102, 7202
1	Temperature, Humidity	7005, 7105, 7205
2	Temperature, Humidity, Air Pressure	7006, 7106, 7206

## External Sensor Field Table "{sen\_field}"

Index	Description	Unit
0	Temperature	°C
1	Humidity	%
2	Digital Input	bool
3	Air Pressure	hPa
4	Dew Point	°C
5	Dew Point Temperature Difference	°C

## 4.9 Modbus TCP

**Important:** All calculations in this chapter are based on addresses starting at "0". For some Modbus TCP Utilities, however, the addresses start at 1, in which case a 1 must be added to the addresses in this chapter. Please try both possibilities for tests!

**Important:** If an attempt is made to access registers that do not exist for the respective device, then an access error will occur. If a device has e.g. 8 relays, then only the first eight coils can be accessed without error!

If Modbus TCP is activated in the configuration, the ports (relays, outputs, eFuses) can be switched and the following data is callable:


### Address range overview:

Device Resource	Start	End	Modbus Data Type
Power/Output/eFuse Ports	0x000	0x3ff	Coils
DC Inputs	0x400	0x7ff	Discrete Inputs
Stop Condition active	0x800	0x800	Discrete Inputs
POE active	0x801	0x801	Discrete Inputs
Status Power Sources	0x1000	0x100f	Discrete Inputs
OVP active (Line-Ins)	0x1010	0x101f	Discrete Inputs
Fuse ok	0x1020	0x102f	Discrete Inputs
ETS Input Power nominal	0x1030	0x1031	Discrete Inputs
eFuse Errors	0x1100	0x11ff	Discrete Inputs
Info Area	0x000	0x005	Input Registers
CPU Sensor values	0x080	0x083	Input Registers
External Sensors	0x100	0x1ff	Input Registers
Fan Level	0x200	0x20f	Input Registers
Line Energy Sensors	0x400	0x39ff	Input Registers
Port Energy Sensors	0x3a00	0x81ff	Input Registers



# Specifications

Bank Energy Sensors	0x8200	0x823f	Input Registers
Power Source Sensors	0x8240	0x827f	Input Registers
Residual Current Monitor	0x8280	0x82cf	Input Registers
Bank Power Source Select	0x000	0x00f	Holding Registers
Fan Mode	0x010	0x01f	Holding Registers

 This chapter is general for all Gude devices. Depending on the device type, some ports or certain sensors are not available.

The Unit-ID is ignored because the device is uniquely identified by its IP address.

## Supported Modbus TCP Functions

Function	Request Code
Read Coils	0x01
Read Discrete Inputs	0x02
Write Single Coil	0x05
Write Multiple Coils	0x0f
Read Input Registers	0x04
Read Holding Registers	0x03
Write Holding Register	0x06
Write Multiple Holding Registers	0x10
Read Device Identification	0x2B / 0x0E

## Coils

Device Resource	Start	End	Device Function
Power/Output/eFuse	0x000	0x3ff	Coil represents Port State

## Discrete Inputs

Device Resource	Start	End	Function when set
DC Inputs	0x400	0x7ff	Input logically 1
Stop Condition active	0x800	0x800	Stop Input active
POE active	0x801	0x801	POE active
Status Power Sources	0x1000	0x100f	Power Source active
OVP active (Line-Ins)	0x1010	0x101f	OVP active
Fuse ok	0x1020	0x1020	Fuse functional (ETS 8801)
ETS Input Power normal	0x1030	0x1031	Voltage nominal (ETS 8801)
eFuse Error	0x1100	0x11ff	eFuse Error (EPC 8291)

### DC Inputs:

The DC inputs can be found in the *Discrete Inputs*. The inputs are arranged as follows:

Input:  $0x0400 + \text{Port} * 0x40 + \text{Input-number}$  (starts with zero).

# Specifications

Port is the number of the external sensor port. For inputs permanently installed in the device, Port = 0.

Example for the first input at external input sensor in port 2:  $0x400 + 2 * 0x40 + 0 = 0x480$

## Status Power Sources:

Power Sources	Offset
EPC 8221 / 8226	0 = Bank A, 1 = Bank B
ENC 2111 / 2191	0 = Pwr1, 1 = Pwr2
ESB 7213 / 7214	0 = Pwr1, 1 = Pwr2 (only 7214)

## Input Registers

Device Resource	Start	End	Function
Info Bereich	0x000	0x005	see table
CPU Sensor values	0x080	0x083	see table
Externe Sensoren	0x100	0x1ff	see table
Fan Level	0x200	0x20f	0 (aus) bis 3 (maximal)
Line Energy Sensors	0x400	0x39ff	see table
Port Energy Sensors	0x3a00	0x81ff	see table
Bank Energy Sensors	0x8200	0x823f	see table
Power Source Sensors	0x8240	0x827f	see table
Residual Current Monitor	0x8280	0x82cf	see table

## Info Area

Address	Width	Information
0	16-bit	Number of Ports (Relay)
1	16-bit	Number of Ports (Outlets) with Energy Measurement
2	16-bit	Number of Banks
3	16-bit	Number of Line-In
4	16-bit	Phases per line
5	16-bit	Number of Inputs

## Sensor Type Description

Address	Width	Information
0x080 to 0x083	16-bit (signed)	CPU Sensor values
0x100 to 0x1ff	16-bit (signed)	external Sensors
0x400 to 0x39ff	32-bit (signed)	Line Energy Sensors
0x3a00 to 0x81ff	32-bit (signed)	Port Energy Sensors
0x8200 to 0x823f	16-bit (signed)	Bank Energy Sensors
0x8240 to 0x827f	16-bit (signed)	Power Source Energy Sensors
0x8280 to 0x82cf	16-bit (signed)	Residual Current Monitor


## CPU Sensor Values

Offset	Sensor Field	Unit
0	Vsystem	0.01 V
1	Vaux	0.01 V
2	Vmain	0.01 V
3	CPU Temperature	0.1 °C

## External Sensors:

The measured value of the external sensors are coded as fixed point arithmetic. For a factor of e.g. 0.1 in the unit the value must be divided by 10 in order to reach the real measured value. A value of 0x8000 means that no sensor is plugged into the corresponding port, or the corresponding field in the sensor is not available. The formula for the address is (the port numbers start at zero):

$$0x100 + \text{Port} * 8 + \text{Offset}$$

 In the Expert Sensor Box 7213 / 7214 the internal sensor corresponds to the value Port = 0, and is coded Port = 1 for Sensor 2 and Port = 2 for Sensor 3.

Offset	Sensor Field	Unit
0	Temperature	0.1 °C
1	Humidity	0.1 %
2	Digital Input	bool
3	Air Pressure	1 hPa (millibar)
4	Dew Point	0.1 °C
5	Dew Point Difference	0.1 °C


For example, the humidity of the second port has the address:  $0x100 + 1 * 8 + 1 = 0x109$

## Energy Sensors:

We distinguish the line sensors (which correspond to the input circuits) and the port sensors, which measure the energy that is passed over the switched port. The measured values of the energy sensors are returned as signed 32-bit integers. The high-order 16-bits are starting on the even address, followed by the low-order 16-bits on the odd address. To calculate the address, there are the following formulas (the values for line, port and phase start at zero):

$$\text{Line: } 0x0400 + \text{Line} * 0x120 + \text{Phase} * 0x60 + \text{Offset} * 2$$

$$\text{Port: } 0x3a00 + \text{Port} * 0x120 + \text{Phase} * 0x60 + \text{Offset} * 2$$

 For devices with only one phase, the phase is set to zero in the formula.

## Examples:


"Power Active" for 1st line sensor and 3rd phase:  $0x400 + 0 * 0x120 + 2 * 0x60 + 1 * 2 = 0x4C2$

# Specifications

"Voltage" for 2nd line sensor and single phase device:  $0x400 + 1 * 0x120 + 2 * 2 = 0x524$

"Power Angle" for 4th port sensor and single phase device:  $0x3a00 + 3 * 0x120 + 6 * 2 = 0x3d6c$

Offset	Sensor Field	Unit
0	Absolute Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	mA
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Absolute Active Energy Resettable	Wh
10	Absolute Reactive Energy	VARh
11	Absolute Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	s
13	Forward Active Energy	Wh
14	Forward Reactive Energy	VARh
15	Forward Active Energy Resettable	Wh
16	Forward Reactive Energy Resettable	VARh
17	Reverse Active Energy	Wh
18	Reverse Reactive Energy	VARh
19	Reverse Active Energy Resettable	Wh
20	Reverse Reactive Energy Resettable	VARh
21	Residual Current Type A	0.1 mA
22	Neutral Current	0.1 mA

 Whether the measured values "Residual Current" and "Neutral Current" are supported depends on the respective device model. For measured values such as "Neutral Current", which are independent of the phase, the same value is returned for all phases.

## DC Energy Sensors:

With the EPC 8291 / 8290 devices, the voltage and current of the individual banks and voltage sources can be read out. The measured values of the energy sensors are returned as signed 16-bit integers. The following formulas are available for the address (the values for Bank and PowerSrc start at zero):

Bank:  $0x8200 + \text{Bank} * 2 + \text{Offset}$

Power Source:  $0x8240 + \text{PowerSrc} * 2 + \text{Offset}$

## Examples:

"Voltage" at third bank:  $0x8200 + 2 * 2 + 0 = 0x8204$

"Current" at first PowerSrc:  $0x8240 + 0 * 2 + 1 = 0x8241$

# Specifications

Offset	Sensor Field	Unit
0	Voltage	0.01 V
1	Current	mA

## Residual Current Monitor Type B (RCMB):

Devices with a Residual Current Monitor Type B (RCMB) module separately measure the RMS and DC fault current components of the input supply. The values are returned as signed 16-bit integers. The following formulas are used for the address (the module number starts at zero):


Bank:  $0x8280 + \text{ModuleNo} * 8 + \text{Offset}$ .

### Examples:

"Residual Current DC" at first module:  $0x8280 + 0 * 8 + 1 = 0x8281$ .


"Output DC" for second module:  $0x8280 + 1 * 8 + 3 = 0x828b$

Offset	Addr. Module 0	Sensor Field	Unit
0	0x8280	Residual Current RMS Type B	0.1 mA
1	0x8281	Residual Current DC Type B	0.1 mA
2	0x8282	Output RMS	bool
3	0x8283	Output DC	bool
4	0x8284	Module State	

 Whether a Residual Current Monitor Type B (RCMB) module is present depends on the particular device model.

## Holding Registers

Device Resource	Start	End	Function
Bank Power Source	0x000	0x00f	Sets Power Source for Bank
Fan Mode	0x010	0x01f	0 = Automatic / 1 = Maximum

 Bank Power Source applies to EPC 8291 and ETS 8801 models. Only the EPC 8291 model has a fan.


## Device Identification

Returns manufacturer name and device identification:

Request Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Object Id	1 Byte	0x00

Response Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Conformity Level	1 Byte	0x01
More Follows	1 Byte	0x00
NextObjectID	1 Byte	0x00
Number of Objects	1 Byte	0x03
Object ID	1 Byte	0x00
Object Length	1 Byte	n1
Object Value	n1 Bytes	"Company Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n2
Object Value	n2 Bytes	"Product Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n3
Object Value	n3 Bytes	"Product Version"

## 4.9.1 Sensor Tables

 **Important:** All calculations in this chapter are based on addresses starting at "0". With some Modbus TCP utilities the addresses start at 1. In this case a 1 must be added to the addresses in this chapter. Please try both possibilities for tests!

### External sensors addresses (Input Register)

Sensor field	Port 1	Port 2
Temperature	0x100	0x108
Humidity	0x101	0x109
Digital input	0x102	0x10a
Air Pressure	0x103	0x10b
Dew Point	0x104	0x10c
Dew Point Difference	0x105	0x10d

A value of 0x8000 means that no sensor is plugged into the corresponding port or the corresponding field in the sensor is not available.

### Line-In Energy Addresses (Input Register)

Offset	Sensor Field	Line 1	Line 2	Line 3	Line 4
0	Absolute Active Energy	0x400	0x520	0x640	0x760
1	Power Active	0x402	0x522	0x642	0x762
2	Voltage	0x404	0x524	0x644	0x764
3	Current	0x406	0x526	0x646	0x766
4	Frequency	0x408	0x528	0x648	0x768
5	Power Factor	0x40a	0x52a	0x64a	0x76a
6	Power Angle	0x40c	0x52c	0x64c	0x76c
7	Power Apparent	0x40e	0x52e	0x64e	0x76e
8	Power Reactive	0x410	0x530	0x650	0x770

9	Absolute Active Energy Resettable	0x412	0x532	0x652	0x772
10	Absolute Reactive Energy	0x414	0x534	0x654	0x774
11	Absolute Reactive Energy Resettable	0x416	0x536	0x656	0x776
12	Reset Time - sec. since Reset	0x418	0x538	0x658	0x778
13	Forward Active Energy	0x41a	0x53a	0x65a	0x77a
14	Forward Reactive Energy	0x41c	0x53c	0x65c	0x77c
15	Forward Active Energy Resettable	0x41e	0x53e	0x65e	0x77e
16	Forward Reactive Energy Resettable	0x420	0x540	0x660	0x780
17	Reverse Active Energy	0x422	0x542	0x662	0x782
18	Reverse Reactive Energy	0x424	0x544	0x664	0x784
19	Reverse Active Energy Resettable	0x426	0x546	0x666	0x786
20	Reverse Reactive Energy Resettable	0x428	0x548	0x668	0x788
21	Residual Current Type A	0x42a	0x54a	0x66a	0x78a
22	Neutral Current	0x42c	0x54c	0x66c	0x78c

The measured values of the energy sensors are returned as signed 32-bit integers. On the even address are first the high-order 16-bit, then follow on the odd address the low-order 16-bit.

## 4.10 MQTT

---

This device supports MQTT 3.1.1 to send configured messages and also to receive commands. This chapter is general for all Gude devices, some Gude models do not have switchable ports.

- Default port for an unencrypted connection is port 1883.
- Default port for a TLS secured connection is port 8883.
- If the broker allows anonymous login, username and password are arbitrary, but a username must be specified.
- If multiple MQTT clients are connected to a broker, the names of the clients must be different. For this reason, "client\_xxxx" is generated as the default name. Here "xxxx" are the last 4 digits of the MAC address.

### Message format

The MQTT messages of the device are always sent in JSON format. E.G..

```
{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}
```

This is a switching of the second port to the state on. The source of the switching command is CGI ("http"). The index is always numeric, "port" can also be alphanumeric for devices with multiple banks, e.g. "A2". At the end follows a timestamp ("ts"), which indicates the number of seconds the device is on, or unixtime if the device has synchronized with an NTP server.


## MQTT Topic Prefix

The topic prefix for the messages can be set in the MQTT configuration. A default would be e.g. "de/gudesystems/epc/[mac]". Here "[mac]" is a placeholder for the MAC address of the device, another possible placeholder is "[host]", which contains the host name. An example topic for a switching message of the second port would then be:

```
"de/gudesystems/epc/00:19:32:01:16:41/switch/2".
```

## Executing console commands

The device can be controlled remotely via MQTT using console commands. A list of all commands can be found in the Console [\[58\]](#) chapter. Depending on the topic, the commands are accepted in different formats.

 As default the execution of commands is not allowed, but must be enabled in the MQTT configuration! ("Permit CLI commands")


### Format 1: Command in JSON Syntax

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd"

Publish Message: "{\"type\": \"cli\", \"cmd\": \"port 2 state set 1\", \"id\": 10}"

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres"

```
"{\"type\": \"cli\", \"cmdres\": [\"OK.\"], \"result\": {\"num\": 0, \"hint\": \"ok\"}, \"id\": 10}"
```

 The JSON object "result" returns whether the command was valid. The object "id" in the command is optional and is passed through in the response from the device. The passed number can help to establish a synchronicity between command and response via the broker.

### Format 2: Raw Text

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/cli"

Publish Message: "port 2 state set 1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/cli"

```
"OK."
```


### Format 3: Simplified port switching

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/port/2"

Publish Message: "0" or "1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/port/2"

```
"0" or "1"
```

 This special form exists only for the port switching commands.

## Device Data Summary



# Specifications

In the **Device Data Summary** the most important data of the device are summarized in a JSON object and sent periodically in a configurable time interval. This summary depends on the properties of the device and the connected sensors, and could look like this:

Topic: en/gudesystems/epc/00:19:32:01:16:41/device/telemetry

Message:

```
{
  "type": "telemetry",
  "portstates": [{
    "port": "1",
    "name": "Power Port",
    "state": 1
  }, {
    "port": "2",
    "name": "Power Port",
    "state": 0
  }, {
    "port": "3",
    "name": "Power Port",
    "state": 0
  }, {
    "port": "4",
    "name": "Power Port",
    "state": 0
  }],
  "line_in": [{
    "voltage": 242.48,
    "current": 0.000
  }],
  "sensors": [{
    "idx": 1,
    "name": "7105",
    "data": [{
      "field": "temperature",
      "v": 21.1,
      "unit": "deg C"
    }, {
      "field": "humidity",
      "v": 71.9,
      "unit": "%"
    }, {
      "field": "dew_point",
      "v": 15.8,
      "unit": "deg C"
    }, {
      "field": "dew_diff",
      "v": 5.3,
      "unit": "deg C"
    }
  ]
}],
  "ts": 210520
}
```

## 4.10.1 Example HiveMQ

What does an MQTT configuration look like using HiveMQ as an example?

# Specifications

### Cluster Details [Back to clusters](#)

Overview **Access Management** Getting started

---

#### Details

Hostname: **f3c06b76137c48439e81c18b11bd06ab.s1.eu.hivemq.cloud**

Port (TLS): 8883

Port (Websocket + TLS): 8884

Create a free or commercial account at [www.hivemq.com](http://www.hivemq.com) and create a new cluster.

### Active MQTT Credentials

These credentials give access to publish and subscribe to your HiveMQ Cloud cluster.

Username	Password	Actions
<b>epc-user</b>	*****	<span>✖</span>

In the "Manage Clusters" section, go to "Access Management" and add an MQTT user with name and password.

### MQTT

Enable MQTT:  yes  no

Broker: **f3c06b76137c48439e81c18b11bd06ab.s1.eu.hivemq**

TLS:  yes  no

TCP Port:  (Default: 8883)

Username:

Set new password:

Repeat password:

Client ID:

Quality of Service (QoS):  ▾

Keep-alive ping interval:  s (minimum 10s)

Topic Prefix:   
de/gudesystems/epc/00:19:32:01:16:41

Permit CLI commands:  yes  no

Publish device data summary interval:  s (0=disabled)

In the MQTT configuration of the Gude device, transfer the hostname of the HiveMQ broker, as well as username and password. Additionally activate TLS and set the correct port.

**Support**

## 5 Support

You will find the latest product software on our website at [www.gude.info](http://www.gude.info) available for download. If you have further questions about installation or operation of the unit, please contact our support team. Furthermore, we present in our support wiki at [www.gude.info/wiki](http://www.gude.info/wiki) FAQs and configuration examples.

### 5.1 Data Security

---

To provide the device with a high level of data security, we recommend the following measures:

- Check that the HTTP password is switched on.
- Set up your own HTTP password.
- Allow access to HTTP via SSL (TLS) only.
- Use TLS 1.3 if possible and avoid TLS 1.1.
- Enable authentication and encryption in SNMPv3.
- Disable SNMP v2 access.
- Enable STARTTLS or SSL in the e-mail configuration.
- Archive configuration files securely, they contain sensitive information.
- In the IP ACL, enter only the devices that require access to HTTP or SNMP.
- Use SSH if possible, since Telnet is not encrypted.
- Set login for telnet or serial console.
- Use MQTT 3.1.1 only with TLS and password.
- Only permit MQTT CLI commands when the broker is trustworthy.
- Modbus TCP is not encrypted, only activate it in a secure environment.
- Activate "Message Authentication" in RADIUS.

#### When accessed from the Internet

- Use a randomized password with at least 32 characters.
- If possible, place the device behind a firewall.

### 5.2 HTTP Performance

---

Access to the Gude devices via the REST API can normally be conducted from one source every second with HTTP. If accessed from multiple sources simultaneously, it is recommended to adjust the poll interval accordingly.

#### SSL (TLS) performance

The initial setup for an SSL (TLS) connection results in numerous crypto operations at the start of the connection. If an RSA 2048 certificate is used, the delay at the beginning is about 2-3 seconds, with RSA 4096 the connection establishment can take up to 10 seconds. The delays result from a limitation of the math unit in the embedded CPU. We therefore recommend an ECC 256 certificate, which is significantly more performant to calculate. Previously established connections TLS connections are stored in a TLS Session Cache (or Session Tickets). However, this cache is not always supported by

browsers, or it expires after only a short time. Especially browsers (HTTPS clients) of other embedded devices (e.g. media controllers) may be limited in the TLS cache.

A remedy for this can be an HTTP keep-alive connection. Once a connection with HTTP keep-alive is opened, it is closed again after 10 seconds if no data is transferred. If you want to receive data periodically, it is therefore recommended to request the data at intervals of less than 10 seconds (e.g. every 5-8 seconds) after establishing the connection with HTTP keep-alive.

## Special TLS 1.3 performance problem with Chrome (MS Edge)

When TLS 1.3 and insecure certificates are used in combination with a web browser with Chromium engine (Google Chrome or MS Edge), performance may be affected, resulting in longer loading times. In this constellation, the Chromium Engine does not correctly support the TLS Session Cache (or Session Tickets) and the math unit of the embedded CPU may be overwhelmed with persistent RSA operations. Possible solutions:

- Use secure certificates (official certificate authority or marked as secure in the OS)
- or keep-alive with poll interval less than 10 seconds
- or use of Firefox browser
- or use ECC 256 (no RSA) certificates
- or configure to "TLS v1.2 only"

## 5.3 Contact

---

GUDE Systems GmbH  
Von-der-Wettern-Straße 23  
51149 Cologne  
Germany

Phone: +49-221-912 90 97  
Fax: +49-221-912 90 98  
E-Mail: [mail@gude.info](mailto:mail@gude.info)  
Internet: [www.gude.info](http://www.gude.info)  
[shop.gude.info](http://shop.gude.info)

Managing Director: Dr.-Ing. Michael Gude

District Court: Köln, HRB-Nr. 17 7 84  
WEEE-number: DE 58173350  
Value added tax identification number (VAT): DE 122778228

## 5.4 Declaration of Conformity

---

This product from the **Expert PDU Energy 8340 / 8341** series is in conformity with the European directives for CE marking applicable to this product. The complete CE declaration of conformity for this product can be found on the website [www.gude.info](http://www.gude.info) in the download section of the product.

## 5.5 FAQ

---

### 1. What can I do if the device is no longer accessible?

- If the Status LED is red, the device has no connection to the switch. Unplug and plug the Ethernet cable. If the Status LED is still red, try other switches. If one uses no switch, but connects e.g. a laptop directly to the device, make sure you are using a crossover Ethernet cable.
- If the status LED is orange for a longer time after unplugging and plugging the Ethernet cable, then DHCP is configured, but no DHCP server was found in the network. After a timeout, the last IP address is configured manually.
- If there is a physical link (status LED is green) to the device, but you can not access the web server, bring the device into bootloader mode and search for it with GBL\_Conf.exe<sup>[14]</sup>. Then check the TCP-IP parameters and change them if necessary.
- If the device is not found by GBL\_Conf.exe in bootloader mode, you can reset the settings to factory defaults<sup>[19]</sup> as the last option.

### Why is a device sporadically no longer accessible when DHCP is activated?

- If DHCP is activated but no DHCP server can be reached, the last IP-address continues to be used. However, the DHCP client tries to reach a DHCP server again every 5 minutes. The DHCP request lasts one minute until it is aborted. During this time the IP-address is not accessible! It is therefore essential to deactivate DHCP for a static IP addresses!

### 3. What can be done if the device is no longer accessible, but the buttons still respond?

- Entering or leaving the bootloader mode does not change the state of the relays. In the chapter Maintenance<sup>[18]</sup> there is a description how to activate the bootloader by pressing the buttons and how to exit the bootloader afterwards. This will restart the firmware without switching relays. However, this procedure does not help if the network itself is incorrectly configured.

### 4. Where is the serial number stored in the device?

The serial number is not stored in the device, but only visible on the device label. However, you can display the MAC address in the IP address configuration<sup>[22]</sup>. If you contact Gude Systems Support with the MAC address, we will be happy to give you the corresponding serial number.

### 5. Why does it sometimes take so long to configure new SNMPv3 passwords on the website?

The authentication methods "SHA-384" and "SHA-512" are calculated purely in software, and can not use the crypto hardware. On the configuration page, e.g. "SHA-512", needs up to 45 seconds to calculate the key.

## 6. Can you enter multiple e-mail recipients?

- Yes. In the E-Mail configuration in the Recipient Address field, it is possible to enter multiple e-mail addresses separated by commas. The input limit is 100 characters.

## 7. Why did the MIB tables change after the firmware update?

- Since the number of possible event types was increased, the previous trap design resulted in an excess of trap definitions: See [Change in Trap Design](#) <sup>52</sup>.

## 8. Importing an older firmware

- During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the [Maintenance Page](#) <sup>16</sup>).

## 9. Disable switching events

- You can set the sending of syslog, emails etc. when switching ports (only concerns Gude devices with relays) under "System" in the sensor configuration <sup>41</sup>.

## - A -

automated Access 46

## - B -

Bootloader Mode 14, 18

Button Lock 44

## - C -

Certificate-Upload 14, 16

clear DNS-Cache 16

Configuration Management 17

Content of Delivery 6

creating certificates 56

## - D -

Data Security 84

Declaration of Conformity 85

Default Display 44

Description 6

device MIB 53, 54

## - E -

Electrical Measurement 9

E-Mail 42

Ethernet connector 7

## - F -

Factory Reset 14

FAQ 86

Firmware Upload 14

Firmware-Update 16

## - G -

GBL\_Conf.exe 14

## - H -

HTTP 25

HTTP Performance 84

HTTPS 25

## - I -

Installation 7

IP-ACL 24, 48

IP-Address 22

IPv6 49

## - L -

load Configuration 16

## - M -

Maintenance 14

messages 46

Modbus TCP 72

MQTT 32, 79

## - N -

NTP 33

## - O -

Ok button 7

Operating the device directly 13

## - R -

Radius 49

Restart 16

## - S -

Security Advice 6

Select button 7

Sensors 10, 41

SNMP 27, 50

SSH 62

SSL 56

Start-up the device 7

Status LED 7

Status-LED 13

syslog 27

## - T -

Technical Specifications 9



# Index

Timer 34  
Timer Configuration 34  
TLS 56



Expert PDU Energy 8340/8341  
© 2023 GUDE Systems GmbH  
1/19/2023